

DIGITAL CAMERA

Stylus 800 **DIGITAL 800


Basic Manual

ENGLISH 2

한국어 24


中文(简体) 46

中文(繁體) 68

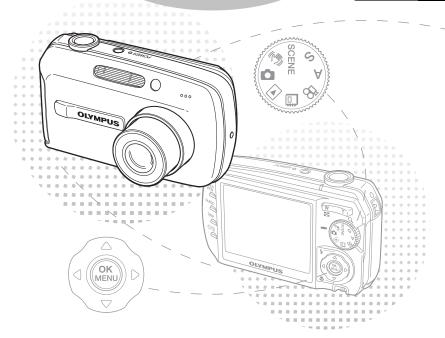

UNPACKING THE BOX CONTENTS

If you find any contents missing or damaged, contact the place of purchase.

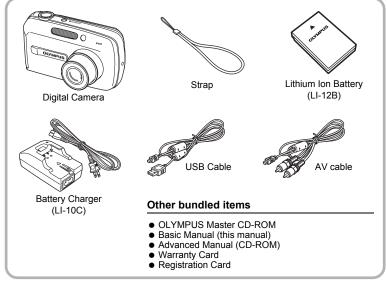

Contents vary depending on the area where you purchased this camera.

Attaching the strap



• Pull the strap tight so that it does not come loose.

MANUAL CONTENTS

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life.
- This manual explains shooting and playback basics. For details on functions, read the advanced manual. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- The screen and camera illustrations shown in this manual were produced during the development stages and may differ from the actual product.

UNPACKING THE BOX CONTENTS	2
THE CAMERA'S CAPABILITIES	4
CHARGING THE BATTERY	5
INSERTING THE BATTERY	5
TURNING THE CAMERA ON	6
TAKING A PICTURE	7
REVIEWING PICTURES	8
ERASING PICTURES	8
SETTING FREQUENTLY USED FUNCTIONS	9
PRINTING YOUR PICTURES	11
ENJOYING YOUR PICTURES ON A COMPUTER	12
SPECIFICATIONS	14
SAFETY PRECAUTIONS	16
Be sure to read and observe all safety precautions.	

The manuals used with this camera are shown below.

Basic Manual Includes explanations of basic functions for

(this manual) first-time users

Advanced Manual Details all the functions and operations

• References to the Advanced Manual are indicated as below.

Advanced Manual "Single-frame erase" (P. 81)

En

THE CAMERA'S CAPABILITIES

Take pictures

Choose from 19 different scene modes according to the picture you want to take and simply press the shutter button.



Organize pictures

Quickly access the pictures you want to see on the calendar display.

Organize your pictures with the album function





GUIDE functions

The shooting guide gives you advice on how to take pictures. The menu guide gives explanations on menu operation. Just press the **GUIDE** button and the camera tells you all you need to know.





Print pictures

You can connect the camera directly to your PictBridge-compatible printer to print pictures without the use of a computer.

Display pictures


Enjoy the slideshow to background music. You can even connect the camera directly to a TV to display pictures for your friends and family.

Use with a computer


Using the provided OLYMPUS Master software on your computer, you can enjoy editing, viewing, and printing pictures.




CHARGING THE BATTERY

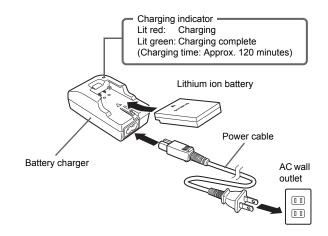

INSERTING THE BATTERY

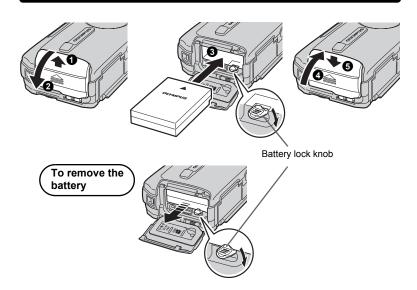

TURNING THE CAMERA ON

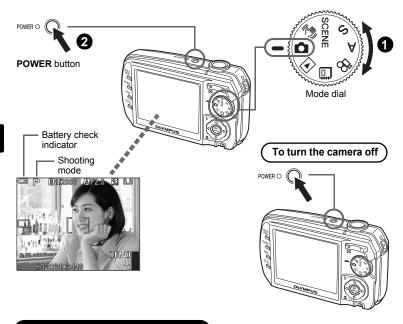

Battery check indicator

The battery check indicator is displayed on the monitor when the camera is turned on.



When the camera stops operating

To save battery power, the camera automatically enters the sleep mode and stops operating after about 3 minutes of non-operation. The camera activates again as soon as you operate the shutter button or zoom button. The camera retracts the lens and turns off automatically 15 minutes after the camera enters sleep mode. Turn the camera on again to use.

En

TAKING A PICTURE

Hold the camera securely







Compose your picture





- Position the AF target mark on your subject.
- Press the zoom button to get close-up pictures of your subject.




AF target mark

Focus on your subject






- Press the shutter button lightly.
- The green lamp lights when the focus and exposure are locked.
- The # mark lights when the flash is about to fire.

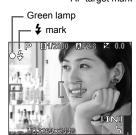

Take the picture



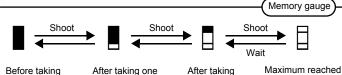


any pictures (Off) After taking one picture (Lit)

After taking several pictures (Lit)


Maximum reached
(All lit)

Wait until the indicator turns off again before taking more pictures.

REVIEWING PICTURES

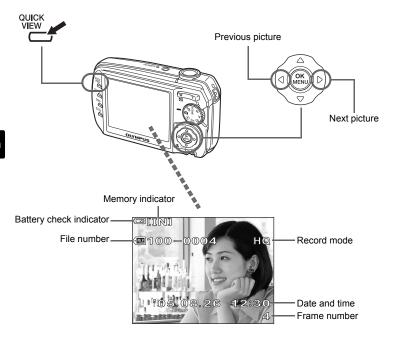

ERASING PICTURES

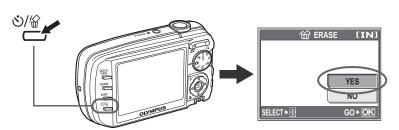


Advanced Manual "Single-frame erase" (P. 81)

En

SETTING FREQUENTLY USED FUNCTIONS


Direct buttons

This camera features buttons for setting functions directly.

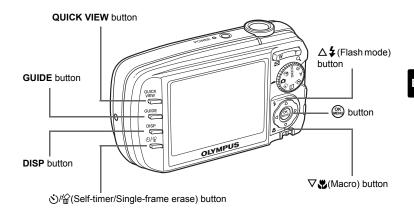

To set the flash mode


Press $\triangle \clubsuit$ repeatedly in shooting mode to set the flash mode.

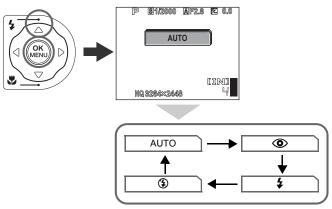

Advanced Manual "Flash shooting" (P. 41)

Menus

Press (a) to display the top menu on the monitor. Use the menu for setting each function.

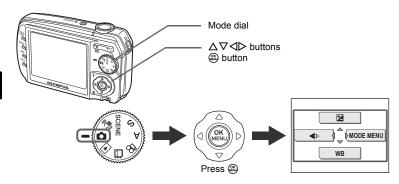

To set the record mode


You can change the record mode used in shooting mode.



Advanced Manual "Record mode" (P. 25)

To set the date and time


You can set the date format, year, month, and day.

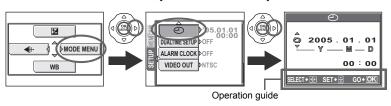

Advanced Manual "Setting the date and time" (P. 92)

PRINTING YOUR PICTURES

By connecting the camera to a PictBridge-compatible printer with the USB cable, you can print out recorded pictures directly.

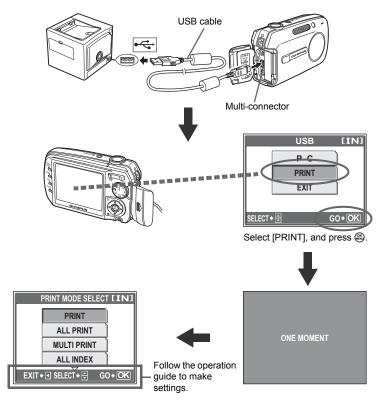

PRINT	Prints the selected picture.	
ALL PRINT	Prints all pictures.	
MULTI PRINT	Prints one picture in multiple layout format.	
ALL INDEX Prints all pictures in index format.		
PRINT ORDER	Prints pictures according to print reservations.	

Advanced Manual "Direct printing (PictBridge)" (P. 99)

ENJOYING YOUR PICTURES ON A COMPUTER

The provided CD-ROM contains OLYMPUS Master software for editing and managing image files. Install the software to get the most out of your digital pictures and movies.

What is OLYMPUS Master?

Download images from the camera

Make panoramic images

Play back images and movies



Edit images (trim, resize, etc.)

Display images in calendar format to manage and organize them

Produce various prints using the printer (index print, calendar, etc.)

Installing OLYMPUS Master

Insert the CD-ROM into the CD-ROM drive.

Windows

Click "OLYMPUS Master".

COLMAND MARKET OX.NEVG MARKET

<u>Macintosh</u>

Double-click the "Installer" icon.


Follow the on-screen instructions.



12

En

Connecting the camera to a computer

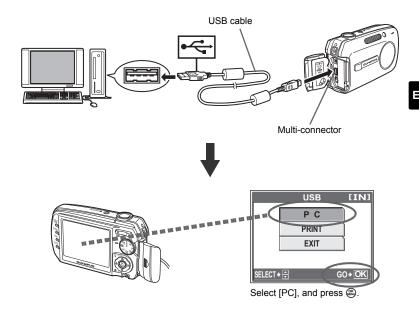

Advanced Manual "Connecting the camera to a computer" (P. 111)



User Registration

After installing the OLYMPUS Master software, we recommend you fill out the user registration for your camera. By making your registration, you will receive information on software and firmware updates from Olympus.

Camera

Product type

: Digital camera (for shooting and displaying)

Recording system

Still pictures

: Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))

Applicable standards

: Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge

Sound with still pictures

: Wave format

Movie

· QuickTime Motion JPFG

: Internal memory Memory

SPECIFICATIONS

xD-Picture Card (16 MB to 1GB)

No. of storable pictures when using the internal memory

Still pictures (without sound)

Record mode	Image size	Number of storable still pictures
SHQ	3264 × 2448	4
HQ		9
SQ1	2560 × 1920	15
	2272 × 1704	19
	2048 × 1536	24
SQ2	1600 × 1200	29
	1280 × 960	46
	1024 × 768	70
	640 × 480	114

Movie

Record mode	Image size	Remaining recording time
SHQ	640 × 480 (15 frames/sec.)	15 sec.
HQ	320 × 240 (15 frames/sec.)	50 sec.
SQ	160 × 120 (15 frames/sec.)	125 sec.

No. of pictures when fully charged No. of effective pixels Image pickup device

: Approx. 300

(based on CIPA battery life measurement standards) : 8,000,000 pixels

Lens

: 1/1.8" CCD (primary color filter), 8,320,000 pixels (gross) : Olympus lens 8.0 to 24.0 mm, f2.8 to 4.9

Photometric system

(equivalent to 38 to 114 mm on a 35mm camera) : Digital ESP metering, spot metering system

Shutter speed

: 4 to 1/2000 sec.

Shooting range : $0.5 \,\mathrm{m}$ (19.7 in.) to ∞ (normal), $0.2 \,\mathrm{m}$ (7.9 in.) to ∞ (macro mode) 0.03 m (1.2 in.) to 0.5 m (19.7 in.) (W only) (super macro mode)

: 2.5" TFT color LCD display, 230,000 pixels Monitor

En

: Approx. 6 sec. (for full flash discharge at room Flash charge time

temperature using a new fully charged battery)

Outer connector : DC-IN iack

USB connector. A/V OUT jack (multi-connector)

Automatic calendar

: 2000 up to 2099 system

Water resistance

Type : Equivalent to IEC Standard publication 529 IPX4

(under OLYMPUS test conditions)

Meaning : Camera is not damaged by water spray from any

direction.

Operating environment

Temperature : 0°C to 40°C (32°F to 104°F) (operation)/

-20°C to 60°C (-4°F to 140°F) (storage)

Humidity : 30% to 90% (operation)/10% to 90% (storage)

: One Olympus lithium ion battery (LI-10B/LI-12B) or Power supply

Olympus AC adapter

Dimensions : 102.8 mm (W) × 57.6 mm (H) × 32.9 mm (D)

(4.0 × 2.3 × 1.3 in.) excluding protrusions

Weight : 181.5 g (5.9 oz) without battery and card

Lithium ion battery (LI-12B)

Product type : Lithium ion rechargeable battery

Standard voltage : DC 3 7 V Standard capacity : 1230 mAh

Battery life : Approx. 300 full recharges (varies on usage)

Operating environment

Temperature : 0°C to 40°C (32°F to 104°F) (charging)/

-10°C to 60°C (14°F to 140°F) (operation)/ 0°C to 30°C (32°F to 86°F) (storage)

Dimensions : 32 × 46 × 10 mm (1.3 × 1.8 × 0.4 in.)

Weight : Approx. 30 g (1 oz)

Battery charger (LI-10C)

Power requirements : AC 100 to 240 V (50 to 60 Hz)

9 VA (100 V) to 16 VA (240 V)

Output : DC 4.2 V. 860 mA Charging time : Approx. 120 min.

Operating environment

: 0°C to 40°C (32°F to 104°F) (operation)/ Temperature -20°C to 60°C (-4°F to 140°F) (storage) Dimensions : 46 × 36.5 × 85 mm (1.8 × 1.4 × 3.3 in.)

Weight : Approx. 70g (2.3 oz)

Design and specifications subject to change without notice.



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK), NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL.



Lightning flash with an arrowhead, enclosed in a triangle, alerts you to the presence of uninsulated voltage points inside the product which could cause a serious electrical shock.

An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.

WARNING

TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK. NEVER EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

General Precautions

Read All Instructions — Before you use the product, read all operating instructions.

Save These Instructions — Save all safety and operating instructions for future reference.

Heed Warnings — Read carefully and follow all warning labels on the product and those described in the instructions

Follow Instructions — Follow all instructions provided with this product.

Cleaning — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner. or any type of organic solvent to clean this product.

Attachments — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.

Water and Moisture — Never use this product around water (near a bathtub, kitchen sink, laundry tub, wet basement, swimming pool or in the rain). For precautions on products with weatherproof designs, read the weatherproofing sections of their manuals.

En

- Location To avoid damage to the product and prevent personal injury, never place this product on an unstable stand, tripod, bracket, table or cart. Mount only on a stable tripod, stand, or bracket. Follow the instructions that describe how to safely mount the product, and use only the mounting devices recommended by the manufacturer.
- **Power Sources** Connect this product only to the power source described on the product label. If you are not sure about the type of power supply in your home, consult your local power company. Refer to your operating instructions for information on using the product with a battery.
- **Grounding, Polarization** If this product can be used with a specified AC adapter, the adapter may be equipped with a polarized alternating current line plug (a plug with one blade wider than the other). This safety feature allows the plug to fit into the power outlet only one way. If you cannot insert the plug into the wall outlet, pull it out, reverse it, and then reinsert it. If the plug still fails to fit, contact an electrician and have the receptacle replaced.
- Protecting the Power Cord The power supply cord should be placed so it will not be walked on. Never put a heavy object on the power cord or wrap the cord around the leg of a table or chair. Keep the area around the power cord connection points, at the power outlet, and at the product connection, free of all AC adapter or accessory power cords.
- **Lightning** If a lightning storm occurs while using a specified AC adapter, remove it from the wall outlet immediately. To avoid damage from unexpected power surges, always unplug the AC adapter from the power outlet and disconnect it from the camera when the camera is not in use.
- Overloading Never overload wall outlets, extension cords, power strips, or other power connection points with too many plugs.
- Foreign Objects, Liquid Spillage To avoid personal injury caused by fire or electrical shock from contact with internal high voltage points, never insert a metal object into the product. Avoid using the product where there is a danger of spillage.
- Heat Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.
- Servicing Refer all servicing to qualified personnel. Attempting to remove the covers or disassemble the product, could expose you to dangerous high voltage points.

- Damage Requiring Service If you notice any of the conditions described below while using a specified AC adapter, unplug it from the wall outlet and refer servicing to qualified service personnel:
 - a) Liquid has been spilled onto the product or some other object has fallen into the product.
 - b) The product has been exposed to water.
 - c) The product does not operate normally despite following operating instructions. Adjust only the controls described in the operating instructions as improper adjustment of other controls could damage the product and require extensive repair work by a qualified technician.
 - d) The product has been dropped or damaged in any way.
 - e) The product exhibits a distinct change in performance.

Replacement Parts — When replacement parts are required, make sure that the service center uses only parts with the same characteristics as the originals, as recommended by the manufacturer. Unauthorized substitution of parts could result in fire, electrical shock, or create other hazards.

Safety Check — Upon completion of servicing or repairs, ask the service technician to perform safety checks to determine that the product is in good working order.

DANGER

If the product is used without observing the information given under this symbol, serious injury or death may result.



If the product is used without observing the information given under this symbol, injury or death may result.



If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or the loss of valuable data may result.

Handling the Camera



♠ WARNING

- Do not use the camera near flammable or explosive gases.
 - To avoid causing a fire or explosion, never use the camera near flammable or explosive gases.
- Do not use the flash on people (infants, small children, etc.) at close range.
 - Use caution when taking flash pictures at close range. When you fire the flash, you must be at least 1 m (3 ft.) away from the faces of your subjects, especially when taking pictures of infants and small children. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.

Keep young children and infants away from the camera.

- · Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
 - Becoming entangled in the camera strap, causing strangulation.
 - Accidentally swallowing the battery, cards or other small parts.
 - · Accidentally firing the flash into their own eyes or those of another child.
 - · Accidentally being injured by the moving parts of the camera.

Do not look at the sun or strong lights through the camera.

 To avoid damaging your eyes, never aim the camera directly into the sun, or any other extremely bright light source.

Do not touch charging batteries (included in some areas) or the battery charger until charging is finished and the batteries have cooled.

 The batteries and battery charger become hot while charging. A specified AC adapter also becomes hot during long use. At these times, they may cause minor burns.

Do not use or store the camera in dusty or humid places.

· Using or storing the camera in dusty or humid places may result in a fire or electric shock

Do not cover the flash with a hand while firing.

• Do not cover the flash with a hand while firing or touch it after it has just been fired. It may be not and cause minor burns. Avoid using the flash for extended periods.

Do not take apart or modify the camera.

 Never attempt to disassemble the camera. The internal circuits contain high. voltage points which could cause serious burns or electrical shock.

Do not let water or foreign objects inside the camera.

• If the camera is accidentally dropped in water, or if liquid is spilled into the camera, stop using it, allow it to dry, and then remove the batteries. Contact the nearest authorized Olympus service center.

!\ CAUTION

Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.

· If you notice any unusual odors, noise, or smoke around the camera during operation, switch it off immediately – and disconnect a specified AC adapter (if attached). Allow the camera to sit idle for a few minutes to cool. Take the camera outdoors, away from flammable objects, and carefully remove the batteries. Never remove the batteries with bare hands, which may cause a fire or burn your hands. Contact the nearest Olympus service center immediately.

Do not use the camera with wet hands.

 To avoid dangerous electrical shock, never hold or operate the camera with wet hands.

Do not leave the camera in places where it may be subject to extremely high temperatures.

 Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger or AC adapter if it is covered (such as a blanket). This could cause overheating, resulting in fire.

Handle the camera with care to avoid getting a low-temperature burn.

- When the camera contains metal parts, overheating can result in a lowtemperature burn. Pay attention to the following:
 - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
 - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.

Be careful with the strap.

 Be careful with the strap when you carry the camera. It could easily catch on stray objects – and cause serious damage.

Use only the AC adapter specified by Olympus.

Never use any AC adapter except one specified by Olympus. Using a
different AC adapter may damage the camera or power source, or result in
accidents or fire. Ensure the adapter used is designed for your region or
country. For more information, contact the nearest Olympus service center
or the store of purchase. Olympus makes no representations or warranties
regarding any damages caused by AC adapters not recommended by
Olympus.

Do not damage the power-supply cord.

- Never pull or modify the power-supply cord of the AC adapter or accessories. Make sure only the plug is securely held during insertion and removal from the outlet. Stop using the camera immediately, and contact the nearest Olympus service center or the store of purchase if:
 - The power-supply cord becomes hot, or it gives off smoke or unusual odors.
 - The power-supply cord is cut or damaged, or the plug has a faulty contact

Battery handling precautions

Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.



/!\ DANGER

- This camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.
- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- · Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.



🗥 WARNING

- Keep batteries dry at all times. Never allow them to come into contact with fresh or salt water.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for this product.
- Insert the battery carefully as described in the operating instructions. Never load the battery with its +/- terminals reversed. Never force the battery into the battery compartment.
- · If the rechargeable battery has not been recharged within the specified time, stop charging it and do not use it.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera and consult your dealer or an authorized Olympus service center. Continued use may result in fire or electric shock
- · If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never attempt to modify the battery compartment on the camera, never insert anything (other than the recommended battery) into the battery compartment.
- · Never subject batteries to strong shocks or continuous vibration.



/!\ CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

Weatherproof feature

This camera is weatherproof, but it cannot be used underwater.

Olympus will not assume any responsibility for malfunction of the camera caused by water getting inside as a result of misuse by the user.

The camera is weatherproof and is not damaged by water spray from any direction.

Observe the following precautions when using the camera.



 Do not wash the camera with water.





 Do not drop the camera into water.



 Do not take pictures underwater.

Water may get inside the camera if the battery compartment/ connector cover or card cover are not firmly closed.

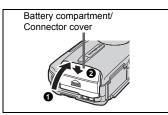

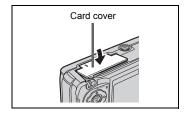

- If the camera gets splashed, wipe the water off as soon as possible with a dry cloth.
- The rechargeable battery and other camera accessories are not weatherproof.

For customers in North and South America

For customers in USA

Declaration of Conformity

Model Number : Stylus 800/μ DIGITAL 800

Trade Name : OLYMPUS

Responsible Party : OLYMPUS IMAGING AMERICA INC.

Address : Two Corporate Center Drive, P.O. Box 9058, Melville, NY

11747-9058 U.S.A.

Telephone Number : 1-631-844-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

For customers in Europe




"CE" mark indicates that this product complies with the European requirements for safety, health, environment and customer protection. "CE" mark cameras are intended for sales in Europe.

Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Computer Inc.
- xD-Picture Card™ is a trademark
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- · The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

상자 내용물 보기

누락되었거나 손상된 내용물이 발견되면 판매점에 문의하십시오.

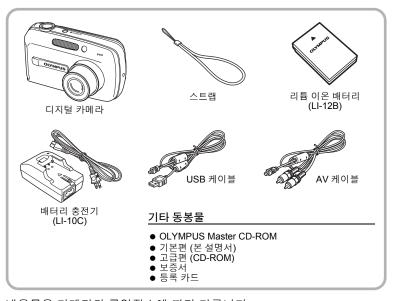

내용물은 카메라의 구입장소에 따라 다릅니다.

스트랩 연결하기



● 스트랩이 느슨해 지지 않도록 단단히 잡아 당깁니다.

사용 설명서 목차

- 저희 올림푸스 디지털 카메라를 구입해 주신데 대해 감사드립니다. 카메라를 사용하 시기 전에 본 설명서를 잘 읽으시고 최적의 기능을 즐기면서 제품을 오랫동안 사용하 시기 바랍니다.
- 본 설명서는 촬영과 재생의 기본에 관해서 설명합니다. 기능에 관한 상세한 내용은, 고 급편을 참조하십시오. 본 설명서를 안전한 곳에 보관하시고 계속해서 사용하시기 바 랍니다.
- 중요한 사진을 촬영하기 전 테스트 촬영을 권장합니다.
- 계속적인 제품 향상을 위하여 올림푸스는 본 취급 설명서에 들어있는 정보를 수정하 거나 갱신하는 권리를 가지고 있습니다.

상자 내용물 보기	24
카메라로 할 수 있는 것	26
배터리 충전	27
배터리 삽입	27
카메라 켜기	28
사진 촬영	29
사진 재생	30
사진 삭제	30
자주 사용하는 기능 설정	31
사진 인쇄	33
컴퓨터에서 촬영한 사진 즐기기	34
사양	36
안전 주의 사항	38
모든 아저주의록 위고 반드시 주수해 주신시오	

본 카메라는 다음 설명서가 준비되어 있습니다.

기본편 (본 설명서) 처음 사용하는 분들을 위한 기본 기능을 설명합니다.

고급편 모든 기능과 조작을 상세히 설명합니다.

● 고급편의 참조처는 아래와 같이 표시합니다.

☞ 고급편 "한 프레임 삭제" (P. 81)

촬영하고 싶은 사진에 따라 19개의 장 면 모드에서 장면을 선택한 다음 셔터 버튼을 누르기만 하면 됩니다.



사진 정리

달력 표시에서 보고 싶은 사진에 빨리 액세스할 수 있습니다. 앨범 기능을 사용하여 사진을 정리합니다.





촬영 가이드는 촬영 방법에 대한 어드 바이스를 합니다. 메뉴 가이드는 메뉴 조작에 대한 설명을 합니다. GUIDE 버 돈을 누르기만 하면 알고 싶어하는 정 보가 표시됩니다.





사진 인쇄

카메라를 PictBridge 호환 프린터에 직 접 연결하여 컴퓨터를 사용하지 않고 직접 인쇄할 수 있습니다.



사진 보기

배경 음악과 함께 슬라이드 쇼를 즐길 수 있습니다. 카메라를 TV에 직접 연결 하여 친구들과 가족들에게 보여줄 수 있습니다.


컴퓨터와 사용

동봉된 OLYMPUS Master를 사용하여 컴퓨터에서 사진을 편집, 열람, 인쇄할 수 있습니다.





Kr

배터리 충전

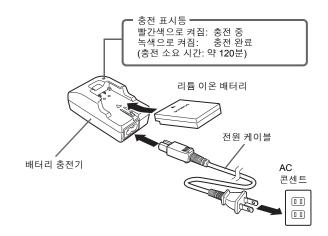

배터리 삽입

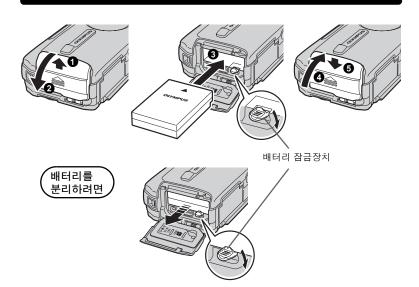

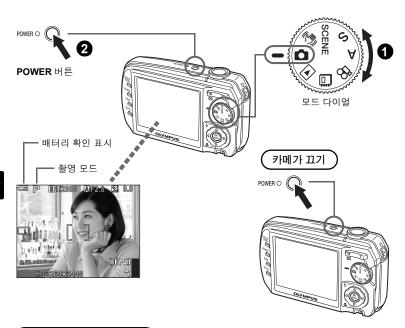

배터리 확인 표시

카메라를 켜면 모니터에 배터리 확인 표시가 나타납니다.



남은 전원이 아주 적습니다. 남은 전원이 없습니다. 촬영할 준비가 되었습니다. 배터리를 곧 충전해야 합니다. 배터리를 충전하십시오.

카메가 조작을 멈춘 경우

카메라는 배터리 전원 절약을 위해, 약 3분 동안 아무 조작도 하지 않으면 자동으로 절전 모드로 전환되어 작동이 중지됩니다. 다시 셔터 버튼이나 줌 버튼을 조작하면 바로 작동 이 됩니다. 카메라가 절전 모드에 들어가고 15분이 지나면 자동으로 렌즈가 들어가고 카 메라가 꺼집니다. 다시 사용하려면 카메라를 켜면 됩니다.

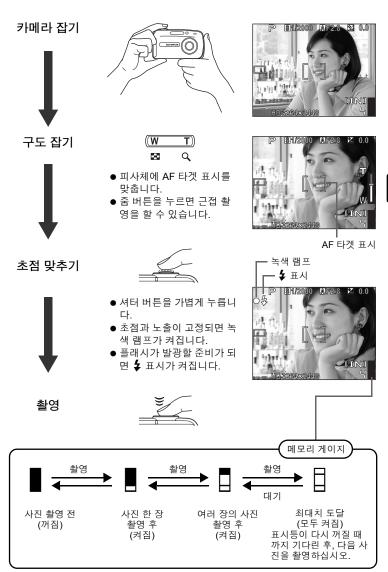


사진 재생


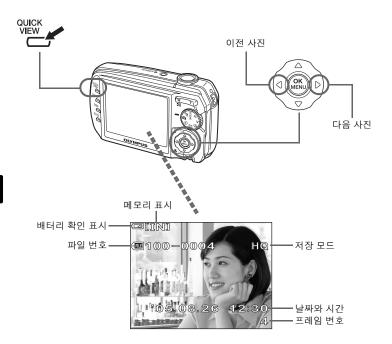


사진 삭제

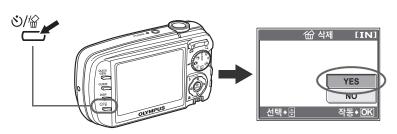


☞ 고급편 "한 프레임 삭제" (P. 81)

Kr

자주 사용하는 기능 설정


다이렉트 버튼

카메라에는 기능을 직접 설정할 수 있는 버튼 기능이 있습니다.

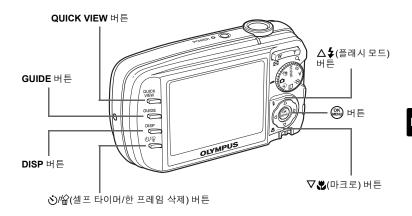

플래시 모드 설정


촬영 모드에서 △鬟를 반복적으로 눌러 플래시 모드를 설정합니다.

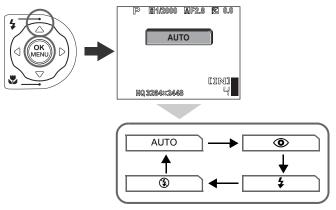

☞ 고급편 "플래시 촬영" (P. 41)


메뉴

●를 눌러 모니터에 톱 메뉴를 표시합니다. 각 기능의 설정은 메뉴를 사용하니다.

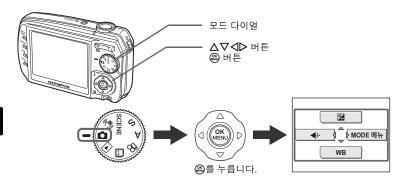

저장 모드 설정

촬영 시 사용할 저장 모드를 변경할 수 있습니다.

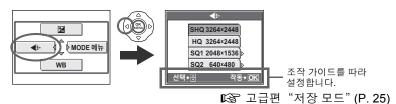

날짜와 시간 설정


날짜 형식, 연, 월, 일을 설정할 수 있습니다.



▶ 고급편 "날짜와 시간 설정" (P. 92)

사진 인쇄

USB 케이블을 통해 카메라를 PictBridge 호환 프린터에 연결하면 촬영한 사진을 직접 인쇄할 수 있습니다.

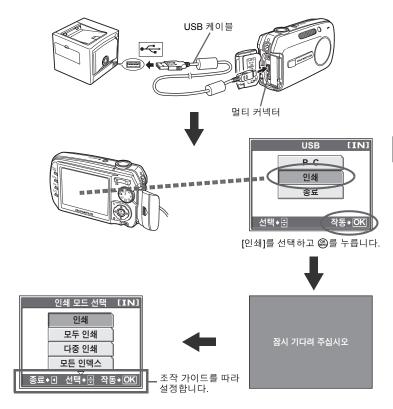


인쇄	선택한 사진을 인쇄합니다.	
모두 인쇄	모든 사진을 인쇄합니다.	
다중 인쇄	한 장의 사진을 여러 가지 레이아웃 형식으로 인쇄합니다.	
모든 인덱스	모든 사진을 인덱스 형식으로 인쇄합니다.	
예약 인쇄	인쇄 예약에 따라 사진을 인쇄합니다.	

応 고급편 "직접 인쇄 (PictBridge)" (P. 99)

동봉된 CD-ROM의 OLYMPUS Master 소프트웨어는 이미지 편집과 관리 를 위한 소프트웨어입니다. 소프트웨어를 설치하여 디지털 사진과 동영상 을 최대한 활용하십시오.

OLYMPUS Master란?

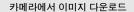

파노라마 이미지 제작

이미지와 동영상 재생



이미지 편집(트리밍, 크기조절 등)

달력 형식으로 이미지를 표시하여 관리 프린터를 사용하여 다채로운 인쇄물 제 작 (인덱스 인쇄, 달력 등)

OLYMPUS Master 설치

CD-ROM 드라이브에 CD-ROM을 넣습니다.

Windows

"OLYMPUS Master" 를 클릭합니다.

OLYMPUS Master OLYMPUS Master CONCAR CHI REA CHI MASE CHI REA CHI MASE CHI REA CHI MASE CHI REA CHI MASE CONTAR REA CHI MASE CONTAR REAL CHI MASE

<u>Macintosh</u>

"Installer" 아이콘을 더블클릭합니다.


● 화면 안내를 따릅니다.



Installer


Kr

카메라를 컴퓨터에 연결

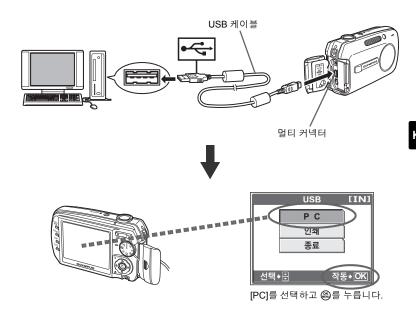

応 고급편 "카메라를 컴퓨터에 연결" (P. 111)

사용자 등록

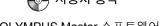

OLYMPUS Master 소프트웨어를 설치한 다음, 카메라의 사용자 등록을 하실 것을 권합니다. 등록을 하면 Olympus의 소프트웨어와 펌웨어 업데이트의 정보를 얻으실 수 있습니다.

제품 형태 : 디지털 카메라 (촬영 및 재생용)

기록 방식

: 디지털 기록, JPEG (Design rule for Camera File 스틸 사진

system(DCF) 준수)

적용 규격 : Exif 2.2. 인쇄 예약 포맷 (DPOF), PRINT Image Matching

III, PictBridge

스틸 사진의 사운드 : Wave 형식

: QuickTime Motion JPEG 동영상

메모리 : 내장 메모리

xD-Picture Card (16 MB ~ 1GB)

내장 메모리 사용 시의 저장 가능한 사진 매수 스틸 사진 (사운드 미사용)

저장 모드	이미지 크기	저장 가능한 스틸 사진 수
SHQ	3264 × 2448	4
HQ	3204 × 2448	9
SQ1	2560 × 1920	15
	2272 × 1704	19
	2048 × 1536	24
SQ2	1600 × 1200	29
	1280 × 960	46
	1024 × 768	70
	640 × 480	114

동영상

저장 모드	이미지 크기	촬영 가능 시간
CHO	640 × 480	15초
SHQ	(15 프레임/초)	19조
110	320 × 240	50초
HQ	(15 프레임/초)	50소
SQ	160 × 120	105 =
SQ	(15 프레임/초)	125초

완전 충전한 경우의 촬영 매수

: 약 300매

(CIPA 배터리수명측정법에 준거)

유효 화소 수 : 8,000,000 픽셀

촬영 소자 : 1/1.8" CCD (원색 컬러 필터), 8,320,000 픽셀 (총)

레즈 : Olympus 렌즈 8.0 ~ 24.0 mm, f2.8 ~ 4.9 (35 mm 카메라 환산 38 ~ 114 mm 상당)

: 디지털 ESP 측광, 스팟 측광 시스템 측광 방식

셔터 속도 : 4 ~ 1/2000 ^木

촬영 범위 : 0.5 m ~ ∞ (표준), 0.2 m ~ ∞ (마크로 모드)

0.03 m ~ 0.5 m (W만) (슈퍼 마크로 모드)

: 2.5인치 TFT 컬러 LCD 디스플레이, 230,000 픽셀 모니터

Kr

플래시 충전 시간 : 약 6초 (완전 충전된 배터리를 실온하에서 사용하여 완전

히 방전된 후의 충전시간 측정)

출력 커넥터 : DC-IN 잭

USB 커넥터, A/V OUT 잭 (멀티 커넥터)

자동 달력 시스템 : 2000년 ~ 2099년

생활 방수

· 영구 형태 : IEC 규격 529 IPX4에 상당

(OLYMPUS 테스트에 의함)

의미 : 어느 방향에서 물을 뿌려도 손상되지 않음

작동 환경

온도 : 0°C ~ 40°C (조작시)/-20°C ~ 60°C (보관시) 습도 : 30% ~ 90% (작동시)/10% ~ 90% (보관시)

전원 공급 : Olympus 리튬 이온 배터리(LI-10B/LI-12B)1개 또는

Olympus AC 어댑터

크기 : 102.8 mm (W) × 57.6 mm (H) × 32.9 mm (D) 돌출부 제외

무게 : 181.5 q 배터리와 카드 제외

리튬 이온 배터리 (LI-12B)

제품 형태 : 리튬 이온 충전 배터리

표준 전압 : DC 3.7 V 표준 용량 : 1230 mAh

배터리 수명 : 약 300회 완전 재충전 가능 (사용 조건에 따라 달라짐)

작동 환경

온도 : 0°C~40°C (충전시)/-10°C~60°C (조작시)/

0°C ~ 30°C (보관시)

크기 : 32 × 46 × 10 mm

무게 : 약 30 g

배터리 충전기(LI-10C)

전원 요구 사항 : AC 100 ~ 240 V (50 ~ 60 Hz)

9 VA (100 V) ~ 16 VA (240 V)

출력 : DC 4.2 V, 860 mA

충전 소요 시간 : 약 120분

작동 환경

온도 : 0°C ~ 40°C (조작시)/-20°C ~ 60°C (보관시)

크기 : 46 × 36.5 × 85 mm

무게 : 약 **70**q

디자인 및 제품 사양은 통지 없이 변경될 수 있습니다.



주의

감전 위험이 있습니다. 열지 마십시오.



주의: 감전 위험을 줄이려면 커버(또는 뒷면)를 제거하지 마십시오. 사용자가 수리할 수 있는 부분이 아닙니다. 공인된 OLYMPUS 서비스 담당자에게 문의하십시오.



삼각형 내의 번개 표시는 제품 내부에 절연되지 않은 전압점이 있어 심각한 감전을 유발할 수 있으므로 주의를 요하는 부분입니다.



삼각형 내의 느낌표는 제품과 함께 제공된 설명서에서 설명하고 있는 중요한 작동 및 유지관리 지침에 대한 주의를 요하는 부분입니다.

경고!

본 제품을 물에 젖게 하거나 다습한 환경에서 작동시키지 마십시오. 화재 또는 감전이 발생할 수 있습니다.

일반적인 주의 사항

- 모든 지침을 읽으십시오 제품을 사용하기 전에 모든 작동 지침을 읽으십시오.
- 이 지침들을 보관하십시오 나중에 참고할 수 있도록 모든 안전 및 작동 상의 지 침들을 보관하십시오.
- 경고에 주의하십시오 제품에 붙어 있는 경고 라벨 및 지침에 기술되어 있는 경 고를 모두 주의 깊게 읽고 따르십시오.
- 지침을 따르십시오 제품에 제공되는 모든 지침들을 따르십시오.
- 청소 청소를 하기 전에 항상 콘센트에서 제품의 플러그를 빼십시오. 청소할 때는 약간 물기있는 천만 사용하십시오. 제품을 청소할 때는 용액, 분무식 클리너 또는 모든 형태의 유기 용제를 절대 사용하지 마십시오.
- 부속물 고객의 안전과 제품 손상 방지를 위해 Olympus에서 권장하는 액세서리 만 사용하십시오.
- 물과 습기 이 제품은 물 근처(욕조, 부엌 싱크대, 세탁용 물통, 습기가 많은 지하실, 수영장 등의 근처 또는 빗속)에서 절대 사용하지 마십시오. 방수 설계된 제품들의 주의 사항에 대해선 관련 사용 설명서의 방수 부분을 읽어 보시기 바랍니다.

- 위치 선정 제품 손상을 예방하고 상해를 막기 위해 제품을 불안정한 스탠드, 삼각대, 선반, 탁자 또는 짐수레에 절대로 올려 놓지 마십시오. 안정된 삼각대, 스탠드 또는 선반 위에만 올려 놓으십시오. 제품을 안전하게 설치하는 방법을 설명하는 지침을 준수하고 제조업체가 권장하는 설치 장비만 사용하십시오.
- 전원 이 제품은 제품 라벨에 기술되어 있는 전원에만 연결하십시오. 집에서 사용하는 전원의 종류를 잘 모를 경우 지역 전력 회사에 문의하십시오. 배터리를 이용한 제품 사용 방법에 대한 정보는 작동 지침들을 참조하십시오.
- 접지, 양극화 이 제품을 지정된 AC 어댑터와 함께 사용할 수 있다면 해당 어댑터에는 양극화 되어 있는 교류 라인 플러그(한 쪽 날이 다른 쪽 날에 비해 넓은 플러그)가 장착되어 있을 것입니다. 이 안전 기능은 플러그가 콘센트에 한쪽 방향으로만 끼워지도록 합니다. 콘센트에 플러그가 끼워지지 않으면 플러그를 뺀 뒤뒤집은 다음 다시 끼우십시오. 그래도 플러그가 끼워지지 않으면 전기 기사를 불러 소켓을 교체하십시오.
- 전원 코드 보호 전원 코드는 밟히지 않는 곳에 배치해야 합니다. 전원 코드에 절대 무거운 물체를 올려 놓거나 탁자나 의자 다리에 전원 코드를 감아 두지 마십시오. 전원 콘센트 및 제품의 전원 코드 연결 지점 주변의 AC 어댑터나 액세서리전원 코드는 모두 치우십시오.
- **번개** 지정된 AC 어댑터를 사용하는 동안 번개를 동반한 폭풍이 몰아치는 경우에는 어댑터를 콘센트에서 즉시 분리하십시오. 예기치 않은 전압 증가로 인한 손상을 피하기 위해 항상 AC 어댑터를 전원 콘센트에서 뽑아 두고 카메라를 사용하고 있지 않을 때는 카메라와 분리해 두십시오.
- **과부하** 콘센트, 확장 코드, 파워 스트립, 또는 기타 전원 연결 장치에 너무 많은 플러그를 사용해 과부하를 유발하지 마십시오.
- 이물질, 용액 유출 내부 고전압 부품과의 접촉으로 인한 화재나 감전에 의해 개 인적인 부상을 당하는 일을 피하기 위해 제품 안에 절대 금속 물체를 삽입하지 마십시오. 용액 유출 위험이 있다면 제품 사용을 삼가해 주십시오.
- 열 난방기, 열 조절장치, 스토브와 같은 열원 또는 스테레오 앰프를 포함해 열을 발생시키는 모든 종류의 장비 근처에서 이 제품을 사용하거나 보관하지 마십시 오.
- 서비스 모든 서비스는 서비스 센터에 문의하십시오. 커버 제거나 제품 분해를 시도할 경우 위험한 높은 전압에 노출될 수 있습니다.

- 서비스가 필요한 손상 지정된 AC 어댑터를 사용하는 도중 아래 설명 중 하나가 발생할 경우 콘센트에서 어댑터를 뽑고 서비스를 요청하십시오.
 - a) 제품에 용액이 쏟아졌거나 다른 물체가 제품에 떨어졌습니다.
 - b) 제품이 물에 노출되었습니다.
 - c) 작동 지침을 준수하였음에도 불구하고 제품이 정상적으로 작동하지 않습니 다. 작동 지침에 설명되어 있는 카메라제어만 조정하십시오. 다른 카메라제어 를 잘못 조정할 경우 제품이 손상되어 공인 기술자에게 광범위한 수리를 맡겨 야 할 수도 있습니다.
 - d) 제품을 떨어뜨렸거나 어떤 형태로든 손상되었습니다.
 - e) 제품 성능이 크게 달라졌습니다.
- 부품 교환 부품 교환이 필요한 경우 서비스 센터가 제조업체에서 권장하는 원래 의 부품과 동일한 특성을 가진 부품들만 사용하도록 하십시오. 승인되지 않은 부품 교체는 화재, 감전을 유발하거나 기타 상해를 발생시킬 수 있습니다.
- **안전 검사 —** 서비스나 수리를 끝낸 뒤 엔지니어에게 제품이 제대로 작동하는지 확 인을 요청하십시오.

이 기호가 표시된 정보를 준수하지 않고 제품을 사용하면 심각한 부상 또는 생명의 위험이 있을 수 있습니다.

이 기호가 표시된 정보를 준수하지 않고 제품을 사용하면 부상 또는 생 명의 위험이 있을 수 있습니다.

이 기호가 표시된 정보를 준수하지 않고 제품을 사용하면 부상, 장비 손 상 또는 중요한 데이터의 손실이 초래될 수 있습니다.

카메라 취급



- 카메라를 가연성 또는 폭발성 가스 근처에서 사용하지 마십시오.
 - 화재나 폭발을 방지하기 위해 카메라를 가연성 또는 폭발성 가스 근처에서 사용하지 마십시오.
- ▶ 가까운 거리에 있는 사람(유아, 아동 등)에게 플래시를 사용하지 마십 시오.
 - 가까운 거리에서 플래시 사진을 촬영할 때는 주의하십시오. 플래시를 발광 할 때, 특히 유아나 아동의 사진을 촬영할 때는 피사체 얼굴로부터 최소 1 m 이상 떨어지십시오. 피사체의 눈과 너무 가까운 거리에서 플래시가 발광되 면 일시적 시력 장애가 발생할 수 있습니다.

● 유아나 아동이 카메라를 만지지 않도록 하십시오.

- 심각한 부상을 초래할 수 있는 다음의 위험한 상황을 예방하기 위해, 카메라 는 항상 어린이나 유아의 손이 닿지 않는 곳에서 사용 및 보관하십시오.
 - 카메라 스트랩에 감겨서 질식할 수도 있습니다.
 - 배터리, 카드 또는 기타 작은 부품들을 삼킬 수 있습니다.
 - 본인의 눈 또는 다른 어린이의 눈에 플래시를 발광할 수 있습니다.
 - 카메라의 작동부에 의해 상해를 입을 수 있습니다.

● 카메라로 태양 또는 강한 빛을 직접 보지 마십시오.

- 눈의 손상을 방지하기 위해, 카메라로 태양 또는 기타 매우 강한 광원을 직접 보지 마십시오.
- 충전이 완료되고 배터리가 식기 전에는 충전 중인 배터리(일부 지역 동봉)나 배터리 충전기에 손을 대지 마십시오.
 - 충전 중에는 배터리 및 배터리 충전기가 뜨겁습니다. 전용 AC 어댑터도 장시 간 사용하면 뜨거워 집니다. 이 상태에서는 가벼운 화상을 입을 수 있습니다.
- 먼지나 습기가 많은 곳에서 카메라를 사용하거나 보관하지 마십시오.
 - 먼지나 습기가 많은 곳에서 카메라를 사용 또는 보관하면 화재나 감전의 위험이 있습니다.
- 플래시가 발광될 때 플래시를 손으로 가리지 마십시오.
 - 플래시가 발광될 때 플래시를 손으로 가리거나 발광된 직후 손으로 만지지 마십시오. 뜨거워져서 가벼운 화상을 입을 수도 있습니다. 플래시를 장시간 사용하지 마십시오.
- 카메라를 분리하거나 개조하지 마십시오.
 - 카메라를 분해하지 마십시오. 내부 회로에 고압부가 포함되어 있어서 심각 한 화재나 감전의 위험이 있습니다.
- 카메라 내부에 물이나 이물질이 들어가지 않도록 주의하십시오.
 - 카메라를 실수로 물에 빠뜨렸거나 카메라에 액체를 엎지른 경우, 사용을 중 지하고 건조시킨 다음 배터리를 제거하십시오. 가까운 Olympus 서비스 센터 에 수리를 의뢰하십시오.

🗘 주의

- 이상한 냄새, 잡음 또는 연기가 나는 경우 카메라 사용을 즉시 중지하 십시오.
 - 카메라 사용 도중 이상한 냄새, 잡음 또는 연기가 나는 경우 즉시 끄고, AC 어 댑터가 연결되어 있으면 빼십시오. 카메라를 몇 분 동안 방치하여 식히십시오. 카메라를 실외로 가져 가서 화기성 물체가 없는 곳에서 배터리를 조심스럽게 빼십시오. 화재나 화상의 위험이 있으므로 배터리를 뺄 때는 맨손으로 만지지 마십시오. 즉시 가까운 Olympus 서비스 센터에 수리를 의뢰하십시오.

● 젖은 손으로 카메라를 사용하지 마십시오.

- 위험한 감전을 방지하기 위해, 젖은 손으로 카메라를 만지거나 조작하지 마십시오.
- 카메라를 온도가 매우 높아질 수 있는 곳에 보관하지 마십시오.
 - 일부 부품이 변형되거나 특정 환경에서는 카메라에 불이 붙을 수 있습니다. 담요 등으로 덮은 채 충전기나 AC 어댑터를 사용하지 마십시오. 과열되어 화 재가 발생할 수 있습니다.
- 카메라를 취급할 때 저온 화상을 입지 않도록 주의하십시오.
 - 카메라에 금속 부분이 있으면 과열로 인한 저온 화상을 입을 수 있습니다. 다음 사항을 주의하십시오.
 - 카메라를 장시간 사용하면 뜨거워집니다. 이 상태에는 카메라를 잡고 있으면 저온 화상을 입을 수 있습니다.
 - 매우 추운 장소에서는 카메라 본체의 온도가 주변 온도보다 낮을 수 있습니다. 낮은 온도에서 카메라를 취급할 때는 가능한 한 장갑을 착용하십시오

● 스트랩을 주의하십시오.

- 카메라를 휴대할 때 스트랩에 주의를 기울이십시오. 스트랩이 다른 물체에 걸려서 심각한 손상의 원인이 될 수 있습니다.
- Olympus에서 지정한 AC 어댑터만 사용하십시오.
 - Olympus에서 지정한 AC 어댑터만 사용하십시오. 다른 AC 어댑터를 사용하면 카메라나 전원에 손상이 가거나 사고 또는 화재가 발생할 수 있습니다. 사용하는 어댑터가 거주 지역 또는 국가에 적합한 것인지 확인하십시오. 자세한 내용은 가까운 Olympus 서비스 센터나 구입 업체에 문의하십시오. Olympus는 Olympus가 권장하지 않은 AC 어댑터의 사용으로 인한 어떠한 손상에 대해서도 책임지지 않습니다.
- 전원 공급 코드가 손상되지 않도록 주의하십시오.
 - AC 어댑터나 액세서리의 전원 공급 코드를 당기거나 개조하지 마십시오. 콘센트에 꽂거나 뺄 때는 플러그만 잡아야 합니다. 다음의 경우에는 카메라 사용을 즉시 중지하고 가까운 Olympus 서비스 센터나 구입 업체에 문의하십시오.
 - 전원 공급 코드가 뜨거워지거나 연기 또는 이상한 냄새가 나는 경우
 - 전원 공급 코드가 잘리거나 손상된 경우 또는 플러그의 접촉이 불량한 경우

배터리 취급시 주의 사항

다음은 배터리 누액, 과열, 연소, 폭발 또는 감전이나 화재를 방지하기 위한 중요 한 지침입니다.

✓ 위험

- 본 카메라에는 Olympus에서 지정한 리튬 이온 배터리를 사용합니다. 지정한 충 전기만 사용하여 충전하십시오. 다른 충전기는 사용하지 마십시오.
- 배터리를 가열하거나 소각하지 마십시오.
- 배터리를 운반하거나 보관할 때는 장신구, 핀, 단추 등의 금속 물질과 접촉하지 않도록 주의하십시오.
- 배터리를 직사광선에 노출되는 곳이나 뜨거운 자동차, 전열 기구 등의 고온 환경 에 보관하지 마십시오.
- 배터리 누액이나 단자 손상을 방지하기 위해 배터리 사용에 대한 다음의 모든 지 침을 준수하십시오. 배터리를 분해하거나 납땜 등의 개조를 하지 마십시오.
- 배터리 액이 눈에 들어간 경우 즉시 깨끗하고 차가운 흐르는 물로 눈을 씻어내고 의사의 치료를 받으십시오.
- 배터리는 항상 어린이의 손이 닿지 않는 곳에 보관하십시오. 어린이가 실수로 배 터리를 삼킨 경우 곧바로 병원에 가십시오.

⚠ 경고

- 배터리는 항상 건조하게 보관해야 합니다. 물이나 소금물에 닿지 않도록 주의하 십시오.
- 배터리의 누액, 과열, 화재 또는 폭발을 방지하기 위해 본 제품에 사용하도록 권 장하는 배터리만 사용하십시오.
- 배터리는 사용 설명서의 설명에 따라 주의 깊게 설치하십시오. 배터리의 +/- 단 자를 거꾸로 장착하지 않도록 주의하십시오. 배터리를 배터리부에 억지로 넣지 마십시오.
- 충전용 배터리가 지정된 시간 내에 충전되지 않으면 충전을 중지하고 사용하지 마십시오.
- 금이 가거나 깨진 배터리는 사용하지 마십시오.
- 배터리에서 액이 흐르거나. 색이나 모양이 변형되거나, 사용 도중 이상 현상이 발 견되면 카메라의 사용을 중지하고 대리점이나 공인 Olympus 서비스 센터에 문 의하십시오. 계속 사용하면 화재나 감전의 위험이 있습니다.
- 배터리 액이 옷이나 피부에 묻은 경우 즉시 옷을 벗고 액이 묻은 부분을 깨끗하 고 차가운 흐르는 물로 씻어내십시오. 액으로 인해 피부에 화상을 입은 경우 즉 시 병원에 가십시오.
- 카메라의 배터리부를 개조하지 않도록 하고 배터리부에 권장 배터리 이외의 어 떠한 물체도 넣지 마십시오.
- 배터리에 강한 충격이나 연속적 진동을 가하지 마십시오.



🗥 주의

- 배터리를 넣기 전에 항상 누액, 변색, 변형 또는 기타 이상 현상의 발생 여부를 검 사하십시오.
- 배터리를 오래 사용하면 뜨거워질 수 있습니다. 가벼운 화상의 위험이 있으므로 카메라를 사용한 직후 배터리를 꺼내지 마십시오.
- 카메라를 장시가 보관할 때는 카메라에서 배터리를 빼두십시오

생활방수 기능

본 카메라는 생활방수 기능을 가지고 있으나 물 속에서는 사용할 수 없습 니다.

Olympus는 사용자의 실수로 인해 카메라 내부에 물이 들어가 카메라가 고장난 경우 책임을 지지 않습니다.

본 카메라는 생활방수 기능을 가지고 있으며 어느 방향에서 물이 뿌려져 도 손상되지 않습니다.

카메라 사용 시에는 다음 주의 사항을 지켜주시기 바랍니다.







● 물로 카메라를 씻지마 ● 물에 카메라를 떨어뜨 ● 물 속에서 촬영하지 십시오.

리지 마십시오.

마십시오.

카메라 내부로 물이 들어갈 수 있으므로 배터리부/커넥터 커버 및 카드 커 버를 단단히 잘 닫으십시오.





- 카메라에 물이 튄 경우 가능한 빨리 마른 천으로 물을 닦아 내십시오.
- 충전용 배터리 및 기타 카메라 액세서리에는 생활방수 기능이 없습니다.

사용자 안내문

이 기기는 가정용으로 전자파 적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.


- * 인증내역 *
- 1.기기명칭(모델명):Stylus 800/µ DIGITAL 800
- 2. 인증받은자의 상호:올림푸스한국(주)
- 3.제조자: OLYMPUS IMAGING CORP.

등록 상표

- IBM은 International Business Machines Corporation의 등록 상표입니다.
- Microsoft 및 Windows는 Microsoft Corporation의 등록 상표입니다.
- Macintosh는 Apple Computer Inc.의 상표입니다.
- xD-Picture Card™는 상표입니다.
- 그 밖의 모든 상호 및 제품명은 관련 소유자의 등록 상표 및/또는 상표입니다.
- 이 설명서에서 언급된 카메라 파일 시스템용 표준은 일본 전자정보기술산업협 회(JEITA)가 규정한 "DCF(Design Rule for Camera File System; 카메라 파일 시스템용 디자인 규격)" 표준입니다.

打开包装盒

如果您发现包装内容物有缺少或损坏,请与购买店联系。

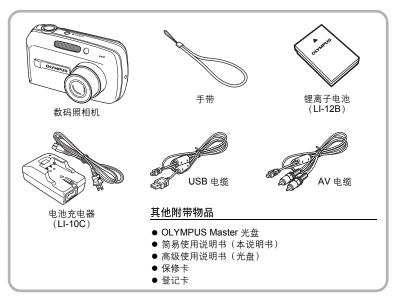

包装内容物会根据购买本照相机的地区而异。

装接手带



● 拉紧手带, 使它不会松动。

说明书目录

- 感谢您购买 Olympus 数码照相机。在使用新照相机之前,请仔细阅读本说明书,充分 了解其性能以便延长照相机的使用寿命。
- ◆本说明书介绍拍摄和播放的基础知识,详细功能说明请阅读高级说明书。请妥善保存本说明书以供随时参考。
- 我们建议您在拍摄重要影像之前,先试拍几张不重要的影像,确保您能正确无误地操作本照相机。
- 本说明书中的画面及照相机图示说明是产品研发过程中的,有可能与实际产品不符。

打开包装盒	46
本照相机的功能	48
对电池充电	49
插入电池	49
开启照相机电源	50
拍摄图像	51
检视图像	52
删除图像	52
设定常用功能	53
打印图像	55
在电脑上欣赏图像	56
规格	58
安全事项	60
请务必阅读并遵守一切安全注意事项。	

本照相机备有以下说明书。

简易使用说明书(本说明书) 向初次使用者提供基本功能的说明。 **高级使用说明书** 详细说明所有功能和操作方法。


● 有关详细说明,请参阅高级使用说明书。参阅高级使用说明书时的 指示如下。

№ 高级使用说明书"删除 1 张" (第 81 页)


本照相机的功能

拍摄图像

根据您要拍摄的图像,从 19 种不同场景模式中选择一种,然后只需按下快门钮。

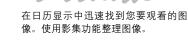

整理图像

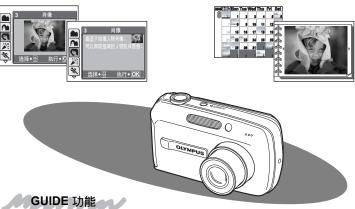


拍摄指南向您提供如何拍摄图像的建议。菜单指南说明菜单的操作。仅需按 GUIDE 钮,照相机就会告诉您所需要了解的一切。



打印图像

可以将照相机直接与 PictBridge 兼容的打印机连接,无需使用电脑就能打印图像。

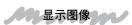


配上背景音乐欣赏幻灯片放映。还可以直接将照相机连接到电视机,向您的朋友和家人显示图像。

结合电脑使用


在电脑上使用附带的 OLYMPUS Master 软件,可以享受编辑、观看或 打印图像的乐趣。




对电池充电

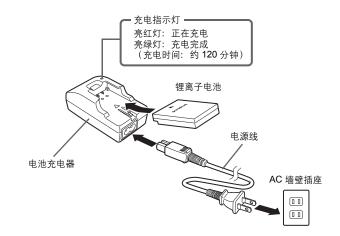

插人电池

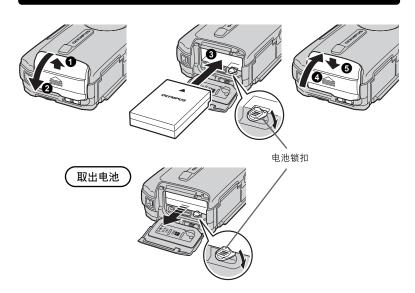

开启照相机电源

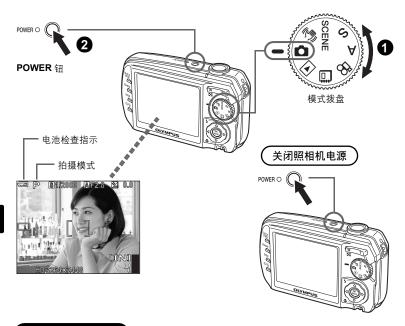

电池检查指示

当照相机电源开启时,液晶显示屏上显示电池检查指示。



照相机停止工作时

为节省电池电力,如果 3 分钟内不进行任何操作,照相机自动进入待机模式并停止工作。一旦操作快门钮或变焦钮,照相机即重新启动。照相机进入待机模式后 15 分钟,会缩回镜头并自动关闭电源。请重新开启照相机使用。

拿稳照相机 T) (W 取景 Q 60 ● 将 AF 对象标志对准被摄 对象。 按变焦钮拉近被摄对象。





AF 对象标志

对被摄对象聚焦



- 轻按下快门钮。
- ●聚焦和曝光被锁定时,绿 色灯点亮。
- 在闪光灯将要闪光时, \$ 标志点亮。

绿色灯 ፟ ↓ 标志 **8**1/2000

拍摄图像






拍摄任何图像之前 (熄灭)


拍摄一张图像后 (点亮)

拍摄多张图像后 (点亮)

达到最大 (全亮) 请等到指示再次熄灭之 后, 再拍摄更多图像。

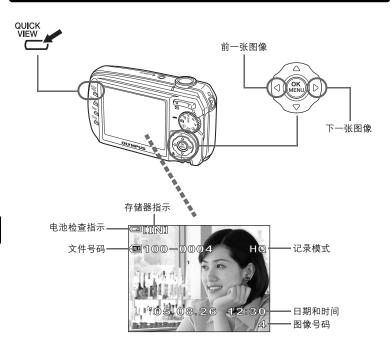

删除图像

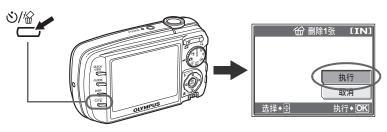


№ 高级使用说明书"删除 1 张" (第 81 页)


设定常用功能

直接按钮

本照相机备有用来直接设定功能的按钮。

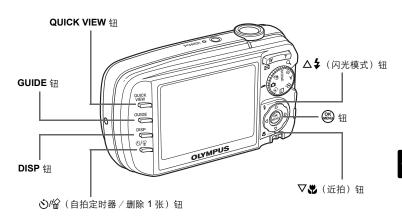


设定闪光模式

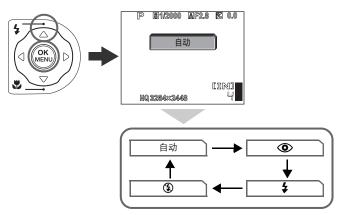

Ľ 高级使用说明书"闪光拍摄" (第 41 页)

菜单

按 🕮 在液晶显示屏上显示顶层菜单。使用菜单设定各项功能。

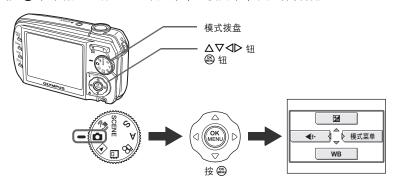

设定记录模式

可以改变拍摄模式中使用的记录模式。



№ 高级使用说明书"记录模式" (第25页)

设定日期和时间


可以设定日期格式、年份、月份和日期。



■ 高级使用说明书"设定日期和时间" (第92页)

打印图像

通过使用 USB 电缆将照相机连接到 PictBridge 兼容的打印机,可以直接打印出拍摄的图像。

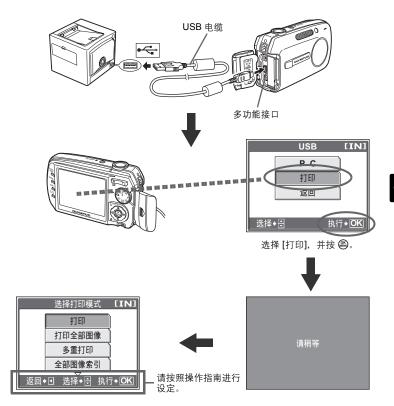

打印	打印所选的图像。
打印全部图像	打印所有图像。
多重打印	以多重布局格式打印一张图像。
全部图像索引	以索引格式打印全部图像。
打印预约	根据打印预约打印图像。

瓜 高级使用说明书"直接打印(PictBridge)" (第99页)

在电脑上欣赏图像

附带光盘包含 OLYMPUS Master 软件,用于编辑和管理图像文件。请安装该软件,使您的数码图像和动画得到最大的利用。

OLYMPUS Master 是什么?



制作全景图像





编辑图像(裁剪、改变尺寸等)

用日历格式显示图像, 以进行整理 和管理 使用打印机进行各种打印(索引打印、日历等)

安装 OLYMPUS Master

将光盘插入光盘驱动器。

Windows

单击 "OLYMPUS Master"。

Macintosh

双击 "Installer" 图标。


● 按照画面指示讲行操作。





Installer

将照相机连接至电脑

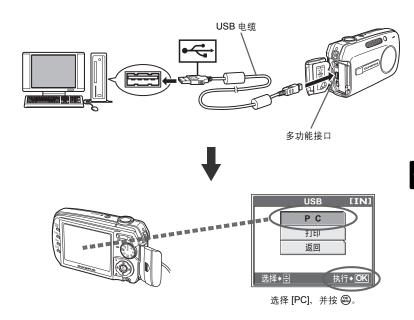

■ 高级使用说明书"将照相机连接至电脑"(第 111 页)



用户注册

在安装 OLYMPUS Master 软件之后,建议您填写照相机的用户注册。进行注册之后,您将从 Olympus 获得关于软件和固件更新的信息。

规格

照相机

产品类型 : 数码照相机(供拍摄和显示)

记录方式

静止图像 :数码记录,JPEG(符合照相机文件系统设计规则(DCF))适用标准 : Exif 2.2、数码打印预约格式(DPOF)、PRINT Image

Matching III、PictBridge

静止图像的声音 : Wave 格式

动画 : QuickTime Motion JPEG

存储器 : 内存

xD-Picture Card (16 MB 至 1 GB)

可存储图像数 静止图像(不带声音) (使用内存时)

伊正区家(小市产目)		
记录模式	图像尺寸	可存储静止 图像数
SHQ	3264 × 2448	4
HQ		9
SQ1	2560 × 1920	15
	2272 × 1704	19
	2048 × 1536	24
SQ2	1600 × 1200	29
	1280 × 960	46
	1024 × 768	70
	640 × 480	114

动画

491 🗀		
记录模式	图像尺寸	剩余记录时间
SHQ	640×480 (15张/秒)	15 秒
HQ	320 × 240 (15 张 / 秒)	50 秒
SQ	160 × 120 (15 张 / 秒)	125 秒

图像数 : 约 300

(充足电时) (基于 CIPA 电池使用时间衡量标准)

有效像素数 : 8,000,000 像素

摄影元件 : 1/1.8" CCD (原色过滤元件), 8,320,000 像素(总数)

镜头 : Olympus 镜头 8.0 至 24.0 mm, f2.8 至 4.9 (相当于 35mm 照相机的 38 至 114 mm 镜头)

测光方式 :数码 ESP 测光、点测光系统

快门速度 : 4 至 1/2000 秒

拍摄范围 : 0.5 m 至 ∞ (标准), 0.2 m 至 ∞ (近拍模式) 0.03 m 至 0.5 m (仅广角) (超级近拍模式)

液晶显示屏 : 2.5" TFT 彩色液晶显示屏, 230,000 像素

:约6秒(使用充足电的新电池在室温下完全闪光后的充电 闪光灯充电时间

时间)

: DC-IN 接口 外部接口

USB 接口、A/V OUT 插口(多功能接口)

自动日历功能

防水

: 2000 至 2099 : 相当干发布号 529 IPX4 的 IEC 标准 类型

(在 OLYMPUS 测试条件下)

含义 : 照相机从任何方向受到水溅都不会损坏。

工作环境

温度 : 0°C 至 40°C (工作) / -20°C 至 60°C (存放) 湿度 : 30% 至 90% (工作) / 10% 至 90% (存放)

电源 : 一个 Olympus 锂离子电池(LI-10B/LI-12B) 或 Olympus

AC 转接器

尺寸 : 102.8 mm (宽) × 57.6 mm (高) × 32.9 mm (厚)

(不包括突出部分)

重量 : 181.5 g (不包括电池和插卡)

锂离子电池(LI-12B)

类型 : 锂离子可充电电池

标准电压 : DC 3.7 V 标准容量 : 1230 mAh

电池寿命 :约 300 次反复充满电(根据使用条件而异)

工作环境

温度 : 0°C 至 40°C (充电) / -10°C 至 60°C (工作) /

> 0°C 至 30°C (存放) : 32 × 46 × 10 mm

尺寸 重量 :约30 q

电池充电器(LI-10C)

电源要求 : AC 100 至 240 V (50 至 60 Hz)

9 VA (100 V) 至 16 VA (240 V)

输出 : DC 4.2 V, 860 mA

充电时间 :约 120 分钟

工作环境

温度 : 0°C 至 40°C (工作) / -20°C 至 60°C (存放)

: 46 × 36.5 × 85 mm 尺寸

:约70q 重量

设计和规格若有变更, 恕不另行通知。



注意

有电击危险切勿打开



小心:为避免电击危险,切勿拆卸盖子(或背面板)。机内没有可供用户自行修理的零部件。请将维修事宜交由有资格的 OLYMPUS 维修人员进行。



三角形内带有箭头的闪电符号旨在引起用户警惕,因本产品机壳内有未绝缘"危险电压",可能很大程度造成电击危险。



围在三角形中的感叹号提醒您,这是随本产品提供的文档中的重要操作和维护指示。

警告!

为避免火灾或电击危险,切勿将本产品暴露在水中或在湿度很高的环境中使用。

Cs

一般注意事项

阅读所有说明书 — 使用本产品前,请阅读所有使用说明书。

保存这些说明书 — 保存所有安全和使用说明书以备今后参考。

注意警告 — 仔细阅读并遵守本产品上所有的警告标签及说明书上的警告说明。

遵照说明 — 请遵照随本产品提供的全部说明进行操作。

清洁 — 在清洁前,必须从墙上插座上断开本产品。请只使用湿布进行清洁。切勿使用任何类型的液体清洁剂、喷雾清洁剂或有机溶液进行清洁。

附件 — 为了您的安全并避免损坏本产品,请只使用 Olympus 推荐的附件。

水和潮气 — 切勿在靠近水的地点(浴缸、厨房水槽、洗衣池、潮湿地下室、游泳池附近或雨中)使用本产品。有关具有全天候设计的产品的注意事项、请参阅其使用说明书的防水特性章节。

- 位置 ─ 为避免损坏本产品并防止人身损害,切勿在不稳定的台架、三角架、托架、桌子或手推车上放置本产品。只能在稳定的三角架、台架或托架上固定本产品。请遵照怎样安全固定本产品的说明进行固定,并只使用制造商推荐的固定装置。
- **电源** 只将本产品连到产品标签上标明的电源上。如果您对家中电源的类型不清楚、请向当地电力公司咨询。如果在本产品中使用电池、请参阅使用说明书。
- 接地、极性 如果本产品可用一个指定的 AC 适配器,此适配器可能配备一个有极性的交流插头(插头的一个接触片比其他接触片宽)。此安全特性使插头只能从一个方向插入插座。如果您无法将插头插入墙上插座,将其拔出,换个方向再插入。如果插头仍不匹配、向电工咨询并更换插座。
- 保护电源线 电源线应正确布线以防被踩踏,切勿将重物放在电源线上或将电源 线绕在桌子或椅子脚上。电源插座或照相机处的电源线接点附近请勿放置任何 AC 活配器或辅助电源线。
- 闪电 当使用指定的 AC 适配器时,如遭雷雨,请立即将其从插座上拔下。为避免意外的功率骤增损坏本产品,当不使用照相机时,应将 AC 适配器从插座上拨下,并将其与照相机断开。
- 过载 切勿使用过多的插头使墙上插座、分接电源线、电源接线板或其他电源接点过载。
- **异物、液体飞溅** 为避免因接触内部高压点导致火灾或电击引起人身伤害,切勿把金属物体插入机内。不要在可能有液体溅出的地方使用本产品。
- **热量** 不要在热源:如散热器、热风机、炉子或任何类型的发热设备、装置、包括功率放大器附近使用、存放本产品。
- **维修** 请合格的人员进行所有的维修。打开盖板或拆卸本产品,会使您暴露于危险的高压点下。

需要维修的损坏 — 如果您使用指定的 AC 适配器时出现下述任—种情况,从插座 拔下 AC 适配器并请合格的人员维修:

- a)液体溅上本产品或其他物体落入本产品内。
- b) 本产品进了水。
- c) 即使按照使用说明书操作、本产品仍不能正常工作。请只调节使用说明书中 说明的控制钮,因为不恰当地调节其他控制钮可能损坏本产品,需要合格的 技术人员讲行大量的修理工作。
- d) 本产品曾经跌落或已损坏。
- e) 本产品性能有明显改变。

更换部件 — 当需要更换部件时,应确保服务中心只使用与原件性能相同或制造商 推荐的部件。未授权的更换部件可能引起火灾、电击或其他危险。

安全检查 — 修理完毕后,请维修人员进行安全检查以确认本产品状况良好。

\triangle	
危险	

若不留心此符号下给出的信息而使用本产品,可能导致严重伤害或死 亡。



若不留心此符号下给出的信息而使用本产品、可能导致伤害或死亡。

小心

若不留心此符号下给出的信息而使用本产品、可能导致轻微的人身伤 害、设备损坏或丢失有价值资料。

使用照相机



- 请勿在易燃易爆气体附近使用照相机。
 - 为避免导致火灾或爆炸、切勿在易燃易爆气体附近使用照相机。
- 请勿近距离对人(婴儿、小孩等)使用闪光灯。
 - 近距离使用闪光灯拍照时须小心。在您使用闪光灯时,必须离被摄对象的 脸部至少 1 m, 特别是为婴儿和小孩拍照时。距离被摄对象的眼睛太近发射 闪光可导致视觉片刻失明。

- 勿让小孩和婴儿接触照相机。
 - 使用和存放照相机时、始终勿让小孩和婴儿拿到、以防止发生下列可导致 严重伤害的危险情况:
 - 被照相机手带缠绕、导致窒息。
 - 意外吞食电池、插卡或其他小部件。
 - 意外朝自己或朝其他小孩眼睛发射闪光。
 - 意外被照相机运动部件伤害。
- 请勿用照相机看太阳或强光。
 - 为避免伤害您的眼睛,切勿将照相机直接瞄向太阳或任何其他极明亮光源。
- 请勿触摸正在充电的电池(在某些地区附送)或电池充电器,要等到充完电和电池冷却后才可以。
 - 充电时,电池和电池充电器会变热。长久使用时,指定的AC转接器也会变热。这时,它们可导致轻微的烫伤。
- 请勿在多尘或潮湿的地方使用或存放照相机。
 - 在多尘或潮湿的地方使用或存放照相机可引起火灾或电击。
- 发射闪光时请勿用手遮住闪光灯。
 - 发射闪光时请勿用手遮住闪光灯,或刚在闪光后触摸它。闪光灯可能较热、会导致轻微的烫伤。避免长时间使用闪光灯。
- 请勿拆开或修改照相机。
 - 切勿拆解照相机。内部电路包含高压点位,它可导致严重烫伤或电击。
- 请勿让水或异物进入照相机。
 - 如果照相机意外掉进水中,或液体渗入照相机中,请停止使用它,让其变干,然后取出电池。请与附近的授权 Olympus 维修中心联系。

小小心

- 如果您注意到照相机周围有任何不寻常的气味、噪声或烟雾,请立即停止使用它。
 - 操作时若您注意到照相机周围有任何不寻常的气味、噪声或烟雾,请立即 关闭电源 – 并拔下指定的 AC 转接器(如果连上)。让照相机闲置几分钟以 冷却。将照相机拿到室外,远离易燃物,并小心地取出电池。切勿赤手取 出电池,这可引起火灾或烫伤您的手。请立即与附近的 Olympus 维修中心 联系。

● 请勿以湿手使用照相机。

- 为防止危险的电击,切勿用湿手持拿或操作照相机。
- 请勿将照相机留在会有极高温度的地方。
 - 否则可导致部件受损,在某些情况下还可导致照相机着火。被盖住(如毯子)时,请勿使用充电器或AC转接器。否则可导致过热,引起火灾。
- 小心使用照相机,避免受到低温烫伤。
 - 当照相机包含金属部件时,过热可导致低温烫伤。小心以下情况:
 - 长时间使用时,照相机会变热。如果您在此状态持拿照相机,可能导致 低温烫伤。
 - 在极冷温度环境的地方,照相机机身的温度可能低于环境温度。如果可能,在寒冷温度下使用照相机时戴上手套。
- 小心手带。
 - 当您携带照相机时,请小心手带。它很容易被杂物夹住而导致严重损坏。
- 请仅使用 Olympus 指定的 AC 转接器。
 - 除 Olympus 指定的 AC 转接器以外,切勿使用任何其他 AC 转接器。使用不同 AC 转接器可损坏照相机或电源,或引发事故或火灾。确保使用的转接器是专为您所在地区或国家设计的。有关详细信息,请与附近的 Olympus 服务中心或购买店联系。对于 Olympus 推荐以外的 AC 转接器导致的任何损坏,Olympus 不作保修。
- 请勿损坏电源线。
 - 请勿牵拉或修改 AC 转接器或配件的电源线。在插入插座或从中拨下时,请确保抓牢插头。如果发生以下情况,请立即停止使用照相机,并与附近的Olympus 维修中心或购买店联系:
 - 电源线变热,或散发出烟雾或不寻常气味。
 - 电源线被切断或损坏,或者插头接触不良。

使用电池注意事项

请遵循以下重要指南,防止电池漏液、过热、燃烧、爆炸,或导致电击或烫伤。

⚠ 危险

- 本照相机使用 Olympus 指定的锂离子电池。使用指定充电器对电池充电。请勿 使用任何其他充电器。
- 切勿加热或焚烧电池。
- 在携带或存放电池时要防备电池接触任何金属物件,如珠宝、别针、拉链等。
- 切勿将电池存放在会受到阳光直接照射的地方,或会受到高温辐射的闷热车辆 中、热源附近等。
- 为防止导致电池漏液或损坏其端子、请小心遵循使用电池的所有说明。切勿尝 试分解电池或用任何方法修改它, 如焊接等。
- 如果电池液进入您的眼睛,请立即用清澈冷水冲洗眼睛,并立即寻求医治。
- 始终将电池存放在小孩够不着的地方。如果小孩意外吞食了电池,请立即寻求 医治。

⚠ 警告

- 始终保持电池干燥。切勿让其接触淡水或咸水。
- 为防止电池漏液、过热或导致火灾或爆炸、请仅使用推荐适合本产品的电池。
- 按操作说明书中所述, 小心插入电池。安装电池时切勿将 +/- 端子弄反。切勿硬 将电池插入电池舱中。
- 如果可充电电池未在指定时间内重新充电、请停止充电且勿使用它。
- 如果电池有裂痕或破损,请勿使用它。
- 如果操作中电池漏液、变色或变形、或有任何其他形式异常、请停止使用照相 机并咨询经销商或授权的 Olympus 服务中心。继续使用可导致火灾或电击。
- 如果电池液弄到您的衣服或皮肤上,请立即脱下衣服并用干净冷水冲洗沾到部 位。如果电解液烧伤皮肤,请立即寻求医治。
- 切勿尝试修改照相机电池舱、切勿将任何东西(推荐的电池除外)插入电池舱。
- 切勿让电池受到强烈冲击或持续振动。

/ 小心

- 在安装之前,始终仔细检查电池,看是否有漏液、变色、变形或任何其他异常。
- 长时间使用时、电池可能变热。为避免轻微烫伤、请勿在使用照相机后立即取 出电池。
- 长时间存放照相机之前,从其取出电池。

防水特性

本照相机防水, 但无法在水中使用。

由于用户的错误使照相机进水而导致故障, Olympus 概不负责。

本照相机防水、来自任何方向的水溅均不会使其受损。

使用照相机时请遵守以下注意事项。







● 请勿用水冲洗照相 机。

● 请勿将照相机掉讲水 ● 请勿在水中拍摄。 中。

如果未关紧电池舱/接口盖或插卡舱盖,则照相机可能会进水。





- 若照相机受水溅,请尽快用干布将水擦干。
- ◆ 充电电池和其它照相机附件不防水。

对北美和南美用户

对美国用户

펙목

产品保证声明

: Stylus 800/μ DIGITAL 800

商标名称 : OLYMPUS

责任方 : OLYMPUS IMAGING AMERICA INC.

地址 : Two Corporate Center Drive, P.O. Box 9058, Melville, NY

11747-9058 U.S.A.

电话号码 : 1-631-844-5000

经测试符合 FCC 规程 家用或办公室用

该装置符合 FCC 规程第 15 章。操作须服从以下两种情况:

(1) 该装置不会引起有害干扰。

(2) 该装置必须接纳收到的任何干扰,包括会引发不合意操作的干扰。

对加拿大用户

此B级数字装置符合加拿大干扰引发装置的全部要求。

对欧洲用户




"CE"标记表示本产品符合欧洲安全、卫生、环境和用户保护要求。带 "CE"标记的照相机将在欧洲销售。

商标

- IBM 为国际商业机器公司的注册商标。
- Microsoft 和 Windows 为微软公司的注册商标。
- Macintosh 为苹果电脑公司的商标。
- · xD-Picture Card™ 为商标。
- 其他所有各公司及产品的名称均为相应业主的注册商标和 / 或商标。
- 本说明书中所引用的照相机文件系统标准为日本电子及信息技术工业协会 (JEITA)制定的"照相机文件系统设计规则(DCF)"标准。

打開包裝盒

如果您發現包裝內容物有缺少或損壞,請與購買店聯絡。

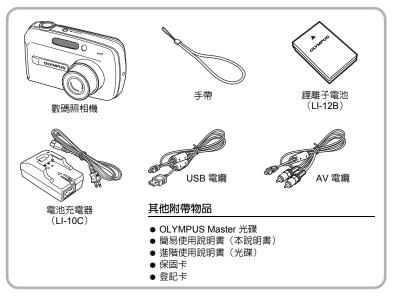

包裝内容物會根據購買本照相機的地區而異。

裝接手帶



● 拉緊手帶,使其不會鬆動。

說明書目錄

- 感謝您購買 Olympus 數碼照相機,在您開始使用新照相機前,請仔細閱讀本說明書, 以便最大限度發揮其件能和延長照相機壽命。
- ◆本說明書介紹拍攝和重放的基礎知識,詳細功能說明請閱讀高級說明書。妥善保存本 說明書以供今後參考。
- 我們建議您在拍攝重要照片之前試拍幾次以熟悉照相機之性能。
- 本說明書中的畫面及照相機圖示說明是產品研發過程中的,有可能与實際產品不符。

打開包裝盒		68
本照相機的功能		70
對電池充電		71
插入電池		71
打開照相機電源		72
拍攝影像		73
檢視影像		74
消除影像		74
設定常用功能		75
列印影像		77
在電腦上觀賞影像		78
規格		80
安全事項		82
請務必閱讀並遵守一	-切安全注意事項。	

本照相機備有以下說明書。

简易使用說明書(本說明書) 向初次使用者提供基本功能的說明。 **進階使用說明書** 詳細說明所有功能和操作方法。

● 參閱進階使用說明書時的指示如下。

哗 進階使用說明書"消除 1 幀"(第 81 頁)


本照相機的功能

拍攝影像

根據您要拍攝的影像,從 19 種不同場景模式中選擇一種,然後按下快門鈕即可。



在日曆顯示中迅速找到您要觀看的影像。使用相簿功能整理影像。

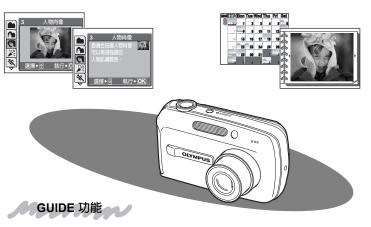

拍攝指南為您提供如何拍攝影像的建議。選單指南說明選單的使用。僅需按 GUIDE 鈕,照相機便會告訴您所需了解的一切。



列印影像

可以將照相機直接與 PictBridge 相容的印表機連接,無需使用電腦便可列印影像。




配上背景音樂觀賞幻燈片放映。還可 以直接將照相機連接到電視機,向您 的朋友和家人展示影像。

結合電腦使用


在電腦上使用附帶的 OLYMPUS Master 軟體,可以享受編輯、觀看或 列印影像的樂趣。




對電池充電

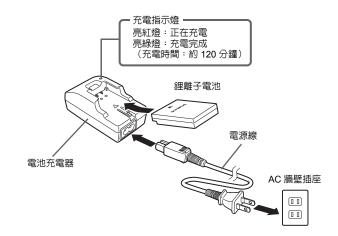

插入電池

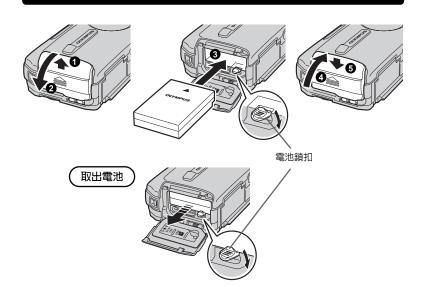

打開照相機電源

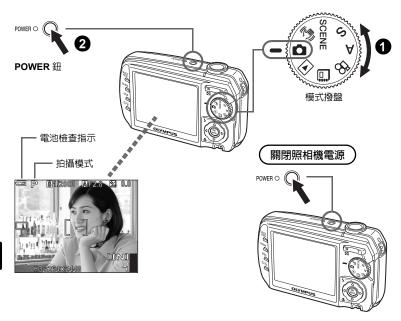

電池檢查指示

當照相機電源打開時,液晶顯示屏上顯示電池檢查指示。



照相機停止工作時

為節省電池電力,如果 3 分鐘内未進行任何操作,照相機自動進入待機模式並停止工作。一旦操作快門鈕或變焦鈕,照相機即重新啓動。照相機進入待機模式後 15 分鐘,會縮回鏡頭並自動關閉電源。請重新啓動照相機使用。

(熄滅)


拿穩照相機 (W T)) 811/2000 AF2.8 取景 Q 60 ● 將 AF 對象標誌對準被攝 對象。 ● 按變焦鈕拉近被攝對象。 AF 對象標誌 緑色燈 對被攝對象聚焦 31/2000 ● 輕按下快門鈕。 ● 聚焦和曝光被鎖定時,綠 色燈點亮。 ● 在閃光燈將要閃光時, ❖ 標誌點亮。 拍攝影像 記憶體標尺 等待 達到最大 拍攝任何影像之前 拍攝一幀影像後 拍攝多幀影像後

(點亮)


(點亮)

(全亮)

請等到指示再次熄滅之 後,再拍攝更多影像。

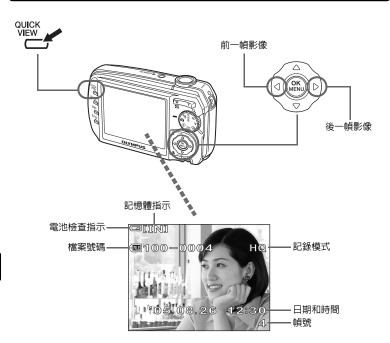

消除影像

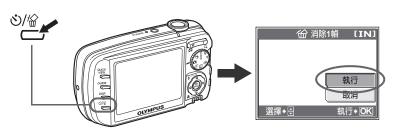


峰 進階使用說明書"消除 1 幀" (第 81 頁)

設定常用功能


直接按鈕

本照相機備有用於直接設定功能的按鈕。

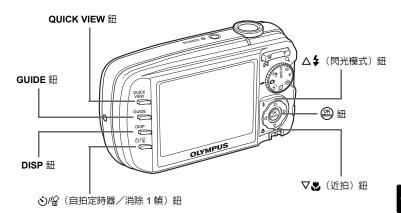

設定閃光模式


在拍攝模式下反覆按 △ ♦ 設定閃光模式。

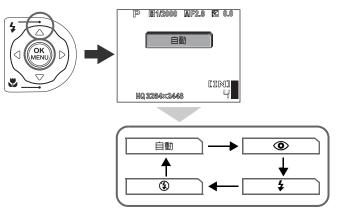

□ 進階使用說明書"閃光拍攝" (第 41 頁)

選單

按 🛎 在液晶顯示屏上顯示頂層選單。使用選單設定各項功能。

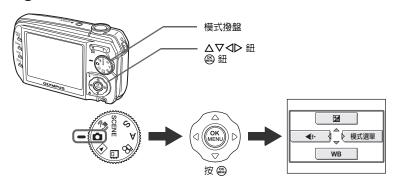

設定記錄模式


可以改變拍攝模式中使用的記錄模式。



▶○ 進階使用說明書"記錄模式" (第 25 頁)

日期/時間設定

可以設定日期格式、年份、月份和日期。

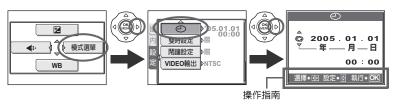


▶○ 進階使用說明書"日期/時間設定" (第92頁)

Ct

列印影像

通過使用 USB 電纜將照相機連接到 PictBridge 相容的印表機,可以直接列印出拍攝的影像。

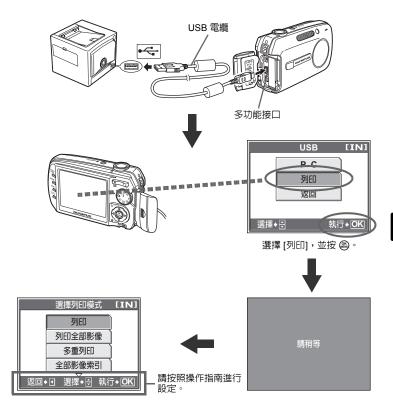

列印	列印所選的影像。
列印全部影像	列印所有影像。
多重列印	以多重佈局格式列印一幀影像。
全部影像索引	以索引格式列印全部影像。
列印預約	根據列印預約列印影像。

ൂ 進階使用說明書"直接列印(PictBridge)"(第 99 頁)

在電腦上觀賞影像

附帶光碟包含 OLYMPUS Master 軟體,用於編輯和管理影像檔案。請安裝該軟體,使您的數碼影像和動畫得到最大的利用。

何謂 OLYMPUS Master?

從照相機下載影像

製作全景影像

重放影像和動畫



編輯影像(裁剪、改變尺寸等)

以日曆格式顯示影像,以進行整理 和管理 使用印表機進行各種列印(索引列 印、日曆等)

安裝 OLYMPUS Master

將光碟插入光碟機。

Windows

按一下 "OLYMPUS Master" ∘

Macintosh

按兩下"Installer"圖示。


● 按照畫面指示進行。





Installer

將照相機與電腦連接

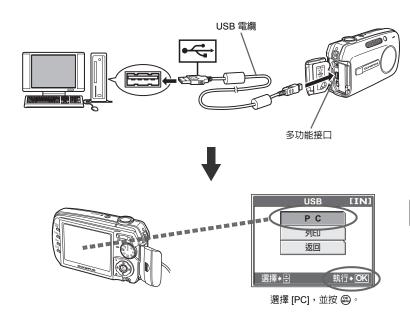

□3 淮階使用說明書"將照相機連接至電腦"(第 111 頁)



用戶註冊

在安裝 OLYMPUS Master 軟體之後,建議您對照相機進行用戶註冊。進行註冊之後,您將從 Olympus 獲得關於軟體和韌體更新的資訊。

照相機

產品類型 : 數碼照相機(供拍攝和顯示)

記錄方式

静止影像 : 數碼記錄、JPEG(符合照相機檔案系統設計規則 (DCF))

適用標準 : Exif 2.2、數碼列印預約格式(DPOF)、PRINT Image

Matching III \ PictBridge

靜止影像的聲音 : Wave 格式

動書 : QuickTime Motion JPEG

記憶體 : 内存

xD-Picture Card (16 MB 至 1 GB)

时正形像 (1川百日)				
記錄模式	影像尺寸	可儲存靜止 影像數		
SHQ	3264 × 2448	4		
HQ		9		
SQ1	2560 × 1920	15		
	2272 × 1704	19		
	2048 × 1536	24		
SQ2	1600 × 1200	29		
	1280 × 960	46		
	1024 × 768	70		
	640 × 480	114		

動書

202		
記錄模式	影像尺寸	剩餘記錄時間
SHQ	640 × 480 (15 幀/秒)	15 秒
HQ	320 × 240 (15 幀/秒)	50 秒
SQ	160 × 120 (15 幀/秒)	125 秒

影像數 : 約 300

(充滿電時) (基於 CIPA 電池使用時間衡量標準)

有效像素數 : 8.000.000 像素

攝影元件 : 1/1.8" CCD (原色過濾元件)、8.320.000 像素(總數)

鏡頭 : Olympus 鏡頭 8.0 至 24.0 mm,f2.8 至 4.9

(相當於 35mm 照相機的 38 至 114 mm 鏡頭)

測光方式 : 數碼 ESP 測光、點測光系統

快門速度 : 4 至 1/2000 秒

拍攝範圍 : 0.5 m 至 ∞ (標準) , 0.2 m 至 ∞ (近拍模式) 0.03 m 至 0.5 m (僅廣角) (超級近拍模式)

液晶顯示屏 : 2.5" TFT 彩色液晶顯示屏 : 230,000 像素

閃光燈充電時間 : 約6秒(使用充滿電的新電池在室溫下完全閃光後的充電

時間)

外部接口 : DC-IN 接口

USB 接口, A/V OUT 插口(多功能接口)

自動日曆功能 : 2000 至 2099

防水

類型 : 相當於發布號 529 IPX4 的 IEC 標準

(在 OLYMPUS 測試條件下)

含義 : 照相機從任何方向受到水濺都不會損壞。

工作環境

溫度 : 0°C 至 40°C (工作) /-20°C 至 60°C (存放) 濕度 : 30% 至 90% (工作) / 10% 至 90% (存放)

電源 : 一個 Olympus 鋰離子電池(LI-10B/LI-12B)或 Olympus

AC 轉接器

尺寸 : 102.8 mm (寬) × 57.6 mm (高) × 32.9 mm (厚)

(不包括突出部分)

重量 : 181.5 g (不包括電池和插卡)

鋰離子電池(LI-12B)

類型 : 鋰離子充電式電池

標準電壓 : DC 3.7 V 標準容量 : 1230 mAh

電池壽命 : 約300次反覆充電(根據使用條件而異)

工作環境

溫度 : 0°C 至 40°C (充電) /-10°C 至 60°C (工作) /

0°C 至 30°C (存放)

尺寸 : 32 × 46 × 10 mm

重量 : 約 30 g

電池充電器(LI-10C)

電源要求 : AC 100 至 240 V (50 至 60 Hz)

9 VA(100 V)至 16 VA(240 V)

輸出 : DC 4.2 V , 860 mA

充電時間 : 約 120 分鐘

工作環境

溫度 : 0°C 至 40°C (工作) /-20°C 至 60°C (存放)

尺寸 : 46 × 36.5 × 85 mm

重量 : 約 70g

設計和規格如有變更,恕不另行通知。

注意

有電擊危險,切勿打開



小心:為避免電擊危險,切勿拆卸蓋子(或背面板)。機內沒有用戶可自行修理的 零部件。講將維修事宜交由有資格的 OLYMPUS 維修人員進行。



三角形内帶有前頭的閃電符號旨在引起用戶警惕,因本產品機殼内有未絶緣的危險電壓,可能造成嚴重的電 擊。



三角形内的感歎號旨在提醒用戶注意本機附帶的資料中有關操作和維護的重要說明。

警告!

為避免火災或電擊危險,切勿將本產品暴露在水中或在濕度很高的環境中使用。

一般注意事項

閱讀所有說明書 — 在使用本產品前,閱讀所有使用說明書。

保存這些說明書 — 保存所有安全和使用說明書以備今後參考。

注意警告 — 仔細閱讀並遵守本產品上所有的警告標籤及說明書上的警告說明。

遵照說明 — 請遵照隨本產品提供的全部說明進行操作。

清潔 — 在清潔前,必須從牆上插座上斷開本產品。請只使用濕布進行清潔。切勿 使用任何類型的液體清潔劑、噴霧清潔劑或有機溶劑進行清潔。

附件 — 為了您的安全並避免損壞本產品,請只使用 Olympus 推薦的附件。

水和潮氣 ─ 切勿在靠近水的地點(浴缸、廚房水槽、洗衣池、潮濕地下室、游泳池附近或雨中)使用本產品。有關具有全天候設計的產品的注意事項,請參閱其使用說明書的耐水特件章節。

Ct

- 位置 ─ 為避免損壞本產品並防止人身傷害,切勿在不穩定的臺架、三角架、托架、桌子或手推車上放置本產品。只能在穩定的三角架、臺架或托架上固定本產品。請遵照怎樣安全固定本產品的說明進行固定,並只使用製造商推薦的固定裝置。
- 電源 只將本產品連到產品標籤上標明的電源上。如果您對家中電源的類型不清 楚,請向當地電力公司諮詢。如何在本產品中使用電池,請參閱使用說明書。
- 接地、極性 如果本產品可用一個指定的 AC 轉接器,此轉接器可能配備一個有極性的交流插頭(插頭的一個接觸片比其他接觸片寬)。此安全特性使插頭只能從一個方向插入插座。如果您無法將插頭插入牆上插座,將其拔出,換個方向再插入。如果插頭仍不匹配,向電工諮詢並更換插座。
- 保護電源線 電源線應正確佈線以防被踩踏,切勿將重物放在電源線上或將電源 線繞在桌子或椅子腳上。電源插座或照相機處的電源線接點附近請勿放置任何 AC 轉接器或輔助電源線。
- 閃電 一當使用指定的 AC 轉接器時,如遇雷雨,請立即將其從插座上拔下。為避 冤意外的功率驟增損壞本產品,當不使用照相機時,應將 AC 轉接器從插座上 拔下,並將其與照相機斷開。
- 過載 切勿使用過多的插頭使牆上插座、分接電源線、電源接線板或其他電源接 點渦載。
- **異物、液體飛濺** 為避免因接觸内部高壓點導致火災或電擊引起人身傷害,切勿 把金屬物體插入機内。不要在可能有液體濺出的地方使用本產品。
- 熱量 不要在熱源,如散熱器、熱風機、爐子或任何類型的發熱設備、裝置,包括功率放大器附近使用、存放本產品。
- **維修** 請合格的人員進行所有的維修。打開蓋板或拆卸本產品,會使您暴露於危險的高壓點下。

需要維修的損壞 — 如果您使用指定的 AC 轉接器時出現下述任一種情況,從插座 拔下 AC 轉接器並請合格的人員維修:

- a) 液體濺上本產品或其他物體落入本產品內。
- b) 本產品進了水。
- c) 即使按照使用說明書操作,本產品仍不能正常工作。請只調節使用說明書中 說明的控制鈕,因為不恰當地調節其他控制鈕可能損壞本產品,需要合格的 技術人員進行大量的修理工作。
- d) 本產品曾經跌落或已損壞。
- e) 本產品性能有明顯改變。

更換部件 ─ 當需要更換部件時,應確保服務中心只使用與原件性能相同或製造商 推薦的部件。未授權的更換部件可能引起火災、電擊或其他危險。

安全檢查 — 修理完畢後,請維修人員進行安全檢查以確認本產品狀況良好。

<u>♪</u>	Æ
危險	Ċ

若不留心此符號下給出的資訊而使用本產品,可能導致嚴重傷害或死

若不留心此符號下給出的資訊而使用本產品,可能導致傷害或死亡。

/ | \/ |\/

若不留心此符號下給出的資訊而使用本產品,可能導致輕微的人身傷 害、設備捐壞或丢失有價值資料。

使用照相機



- 請勿在易燃易爆氣體附近使用照相機。
 - 為避免導致火災或爆炸,切勿在易燃易爆氣體附近使用照相機。
- 請勿近距離對人(嬰兒、小孩等)使用閃光燈。
 - 近距離使用閃光燈拍照時須小心。在您使用閃光燈時,必須離被攝對象的 臉部至少 1 米,特別是為嬰兒和小孩拍照時。距離被攝對象的眼睛太近發 射閃光可導致視覺片刻失明。

● 勿讓小孩和嬰兒接觸照相機。

- 使用和存放照相機時,始終勿讓小孩和嬰兒拿到,以防止發生下列可導致嚴重傷害的危險情況:
 - 被照相機手帶纏繞,導致窒息。
 - 意外吞食雷池、插卡或其他小部件。
 - 意外朝自己或朝其他小孩眼睛發射閃光。
 - 意外被照相機移動部件傷害。
- 請勿用照相機看太陽或強光。
 - 為避免傷害您的眼睛,切勿將照相機直接瞄向太陽或任何其他極明亮光源。
- 請勿觸摸正在充電的電池(在某些地區附送)或電池充電器,要等到 充完電和電池冷卻後才可以。
 - 充電時,電池和電池充電器會變熱。長久使用時,指定的 AC 轉接器也會變熱。這時,它們可導致輕微的燙傷。
- 請勿在多塵或潮濕的地方使用或存放照相機。
 - 在多塵或潮濕的地方使用或存放照相機可引起火災或電擊。
- 發射閃光時請勿用手遮住閃光燈。
 - 發射閃光時請勿用手遮住閃光燈,或剛在閃光後觸摸它。閃光燈可能較熱,會導致輕微的燙傷。避免長時間使用閃光燈。
- 請勿拆開或修改照相機。
 - 切勿拆解照相機。内部電路包含高壓點位,它可導致嚴重燙傷或電擊。
- 請勿讓水或異物進入照相機。
 - 如果照相機意外掉進水中,或液體滲入照相機中,請停止使用它,讓其變干,然後取出電池。請與附近的授權 Olympus 維修中心諮詢。

AMM A

- 如果您注意到照相機周圍有任何不尋常的氣味、雜訊或煙霧,請立即 停止使用它。
 - 操作時若您注意到照相機周圍有任何不尋常的氣味、雜訊或煙霧,請立即關閉電源 並拔下指定的 AC 轉接器(如果連上)。讓照相機閒置幾分鐘以冷卻。將照相機拿到室外,遠離易燃物,並小心地取出電池。切勿赤手取出電池,這可引起火災或燙傷您的手。請立即與附近的 Olympus 維修中心諮詢。

- 為防止危險的電擊,切勿用濕手持拿或操作照相機。
- 請勿將照相機留在會有極高溫度的地方。
 - 否則可導致部件受損,在某些情況下還可導致照相機著火。被蓋住(如毯子)時,請勿使用充電器或AC轉接器。否則可導致過熱,引起火災。
- 小心持拿照相機,避免受到低溫燙傷。
 - 當照相機包含金屬部件時,過熱可導致低溫燙傷。小心以下情況:
 - 長時間使用時,照相機會變熱。如果您在此狀態持拿照相機,可能導致 低溫湯傷。
 - 在極冷溫度環境的地方,照相機機身的溫度可能低於環境溫度。如果可能,在寒冷溫度下持拿照相機時戴上手套。
- 小心手帶。
 - 當您攜帶照相機時,請小心手帶。它很容易被雜物夾住而導致嚴重損壞。
- 請僅使用 Olympus 指定的 AC 轉接器。
 - 除 Olympus 指定的 AC 轉接器以外,切勿使用任何其他 AC 轉接器。使用不同 AC 轉接器可損壞照相機或電源,或引發事故或火災。確保使用的轉接器是專為您所在地區或國家設計的。有關詳細資訊,請與附近的 Olympus 服務中心或購買店諮詢。對於非 Olympus 公司推薦的 AC 轉接器引起的任何損害,Olympus 公司概不負責。
- 請勿損壞電源線。
 - 請勿牽拉或修改 AC 轉接器或配件的電源線。在插入插座或從中拔下時,請確保抓牢插頭。如果發生以下情況,請立即停止使用照相機,並與附近的Olympus 維修中心或購買店諮詢:
 - 電源線變熱,或散發出煙霧或不尋常氣味。
 - 電源線被切斷或損壞,或者插頭接觸不良。

Ct

使用電池注意事項

請遵循以下重要指南,防止電池漏液、過熱、燃燒、爆炸,或導致電擊或燙傷。

危險

- 本照相機使用 Olympus 指定的鋰離子電池。使用指定充電器為電池充電。請勿使用任何其他充電器。
- 切勿加熱或焚燒電池。
- 在攜帶或存放電池時要防備電池接觸任何金屬物件,如珠寶、別針、螺絲等。
- 切勿將電池存放在會受到陽光直接照射的地方,或會受到高溫輻射的悶熱車輛中、熱源附近等。
- 為防止導致電池漏液或損壞其端子,請小心遵循使用電池的所有說明。切勿嘗試分解電池或用任何方法修改它,如焊接等。
- 如果電池液進入您的眼睛,請立即用清澈冷水沖洗眼睛,並立即尋求醫治。
- 始終將電池存放在小孩夠不著的地方。如果小孩意外吞食了電池,請立即尋求 醫治。

⚠ 警告

- 始終保持電池乾燥。切勿讓其接觸淡水或鹹水。
- 為防止電池漏液、過熱或導致火災或爆炸,請僅使用推薦用於本產品的電池。
- 按操作說明書中所述,小心插入電池。安裝電池時切勿將 +/- 端子弄反。切勿硬將電池插入電池艙中。
- 如果充電式電池未在指定時間内重新充電,請停止充電且勿使用它。
- 如果電池有裂痕或破損,請勿使用它。
- 如果操作中電池漏液、變色或變形,或有任何其他形式異常,請停止使用照相機並諮詢經銷商或授權的 Olympus 服務中心。繼續使用可導致火災或電擊。
- 如果電池液弄到您的衣服或皮膚上,請立即脫下衣服並用乾淨冷水沖洗沾到部位。如果電解液燒傷皮膚,請立即尋求醫治。
- 切勿嘗試修改照相機電池艙,切勿將任何東西(推薦的電池除外)插入電池艙。
- 切勿讓電池受到強烈衝擊或持續振動。


小心

- 在安裝之前,始終仔細檢查電池,看是否有漏液、變色、變形或任何其他異常。
- 長時間使用時,電池可能變熱。為避冤輕微燙傷,請勿在使用照相機後立即取 出電池。
- 長時間存放照相機之前,從其取出電池。

耐水特性

本照相機耐水,但無法在水中使用。 由於用戶的錯誤使照相機進水而導致故障,Olympus 概不負責。 本照相機耐水,來自任何方向的水濺均不會使其受損。 使用照相機時請遵守以下注意事項。



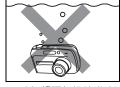




● 請勿用水沖洗照相 機。

請勿將照相機掉進水 中。

● 請勿在水中拍攝。

如果未關緊電池艙蓋/接口蓋或插卡艙蓋,則照相機可能會進水。



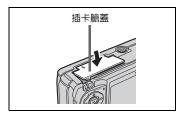

- 若照相機受水濺,請盡快用乾布將水擦乾。
- 充電電池和其他照相機附件不耐水。

對北美和南美用戶

對美國用戶

產品保證聲明

型號 Stylus 800/µ DIGITAL 800

: OLYMPUS 商標名稱

責任方 OLYMPUS IMAGING AMERICA INC. 地址

Two Corporate Center Drive, P.O. Box 9058, Melville, NY

11747-9058 U.S.A.

電話號碼 : 1-631-844-5000

FCC 規程

經測試符合家用或辦公室用

該裝置符合 FCC 規程第 15 章。操作須服從以下兩種情況:

(1) 該裝置不會引起有害干擾。

(2) 該裝置必須接納收到的任何干擾,包括會引發不合意操作的干擾。

對加拿大用戶

此 B 級數碼裝置符合加拿大干擾引發裝置規程的全部要求。

對歐洲田戶



"CE"標記表示本產品符合歐洲安全、衛生、環境和用戶保護要求。 帶 "CE"標記的照相機將在歐洲銷售。

商標

- IBM 為國際商業機器公司的註冊商標。
- Microsoft 和 Windows 為微軟公司的註冊商標。
- Macintosh 為蘋果電腦公司的商標。
- xD-Picture Card™ 為商標。
- 其他所有各公司及產品的名稱均為相應業主的計冊商標和/或商標。
- 本說明書中所引用的照相機檔案系統標準為日本電子及資訊技術工業協會 (JEITA) 制定的"照相機檔案系統設計規則(DCF)"標準。

元佑實業有限公司

台灣台北市内湖區陽光街365巷37號5樓

Memo

Memo



http://www.olympus.com/

OLYMPUS IMAGING CORP. -

Shinjuku Monolith, 3-1 Nishi-Shinjuku 2-chome, Shinjuku-ku, Tokyo, Japan

奥林巴斯(上海)映像销售有限公司 =

主页: http://www.olympus.com.cn 客户服务中心:

北京: 北京市东城区东长安街 1 号东方广场 W2 办公楼 707 室 电话: 010-8518-0009 传真: 010-8518-1899 邮编: 100738

上海: 上海市天钥桥路 30 号美罗大厦 电话: 021-6426-7119 传真: 021-6426-8325 邮编: 200030 广州: 广州市环市东路 403 号广州国际电子大厦 1605-1608 室 电话: 020-6122-7111 传真: 020-6122-7720 邮编: 510095

· 奥林巴斯香港中国有限公司 •

香港九龙尖沙咀海港城港威大厦 6 座 35 楼 电话: 00852-2730-1505 传真: 00852-2730-7976

= OLYMPUS KOREA CO., LTD. =

9F, Hyundai Marines BD, 646-1, Yeoksam-Dong, Gangnam-Gu, Seoul, Korea http://www.olympus.co.kr Tel. 1544-3200

- OLYMPUS IMAGING AMERICA INC. -

Two Corporate Center Drive, P.O. Box 9058, Melville, NY 11747-9058, U.S.A. Tel. 631-844-5000

Technical Support (USA)

24/7 online automated help: http://www.olympusamerica.com/support Olympus software updates can be obtained at: http://www.olympus.com/digital

OLYMPUS IMAGING EUROPA GMBH =

Wendenstrasse 14-18, 20097 Hamburg, Germany Tel: +49 40-23 77 3-0 / Fax: +49 40-23 07 61

Please visit our homepage http://www.olympus-europa.com

Printed in China VH081601